


FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the bolts/nuts and seat bracket.

NOTE:

After removing the seat bracket, be careful the angle of the fuel tank.

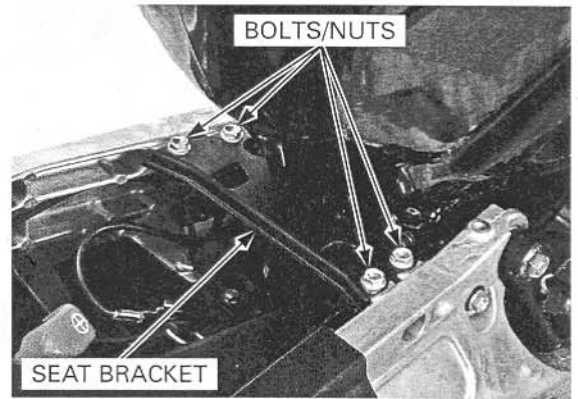

Remove the screw from the rear fender.

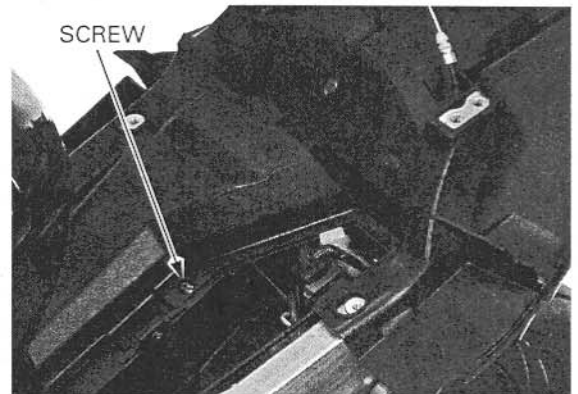

Remove the trim clip.

Unhook the rear fender A from the seat rail brace, then remove the rear fender A by pulling up and back.

Remove the seat lock cable guide.

