

MAINTENANCE

MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult their authorized Honda dealer.

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE 1)								REFER TO PAGE
			X1,000 mi	0.6	4	8	12	16	20	24	
			X1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
* FUEL LINE										4-5	
* THROTTLE OPERATION										4-6	
* AIR CLEANER		NOTE2								4-6	
SPARK PLUG										4-7	
* VALVE CLEARANCE										4-11	
ENGINE OIL			R		R		R		R	4-15	
ENGINE OIL FILTER			R		R		R		R	4-15	
* ENGINE IDLE SPEED										4-18	
RADIATOR COOLANT		NOTE3							R	4-18	
* COOLING SYSTEM										4-19	
* SECONDARY AIR SUPPLY SYSTEM										4-19	
* EVAPORATIVE EMISSION CONTROL SYSTEM		NOTE 4								4-20	
DRIVE CHAIN										4-21	
BRAKE FLUID		NOTE3				R			R	4-25	
BRAKE PAD WEAR										4-26	
BRAKE SYSTEM										4-26	
* BRAKE LIGHT SWITCH										4-27	
* HEADLIGHT AIM										4-28	
CLUTCH SYSTEM										4-28	
SIDE STAND										4-29	
* SUSPENSION										4-29	
* NUTS, BOLTS, FASTENERS										4-33	
** WHEELS/TIRES										4-33	
** STEERING HEAD BEARINGS										4-34	

* Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified

** In the interest of safety, we recommended these items be serviced only by an authorized Honda dealer

NOTES:

1. At higher odometer reading, repeat at the frequency interval established here.
2. Service more frequency if the motorcycle is ridden in unusually wet or dusty areas.
3. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
4. California type only.