


Major adjustment is performed at the clutch lifter lever.

Loosen the lock nut and turn the adjusting nut to adjust the free play.

Tighten the lock nut while holding the adjusting nut.

If proper free play cannot be obtained, or the clutch slips during test ride, disassemble and inspect the clutch (page 10-7).

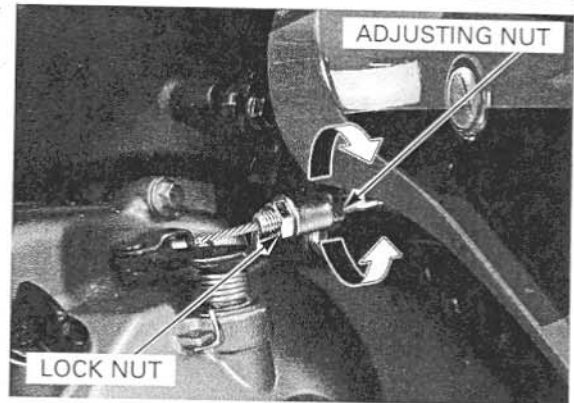


## SIDE STAND

Support the motorcycle on a level surface.

Check the side stand spring for damage or loss of tension.


Check the side stand assembly for freedom of movement and lubricate the side stand pivot if necessary.

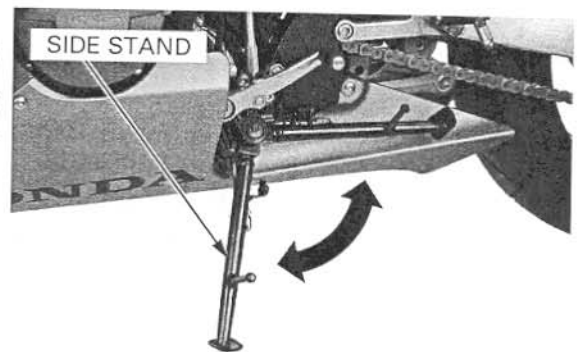

Check the side stand ignition cut-off system:

- Sit astride the motorcycle and raise the side stand.
- Start the engine with the transmission in neutral, then shift the transmission into gear, with the clutch lever squeezed.
- Move the side stand full down.
- The engine should stop as the side stand is lowered.

If there is a problem with the system, check the side stand switch (page 20-22).

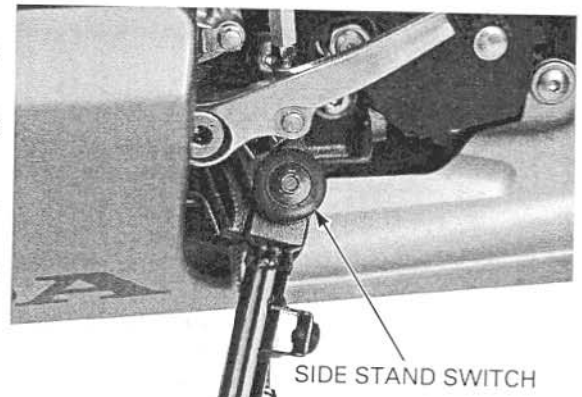

## SUSPENSION

### FRONT SUSPENSION INSPECTION

Check the action of the forks by operating the front brakes and compressing the front suspension several times.

Check the entire assembly for signs of leaks, damage or loose fasteners.

*Loose, worn or damaged suspension parts impair motorcycles stability and control.*

Replace damaged components which cannot be repaired.

Tighten all nuts and bolts.

Refer to page 14-18 for fork service.

