



OIL STRAINER/PRESSURE RELIEF VALVE

REMOVAL


- Drain the engine oil (page 4-16).
- Remove the exhaust pipe (page 3-24).
- Remove the oil pan flange bolts, stay and oil pan.

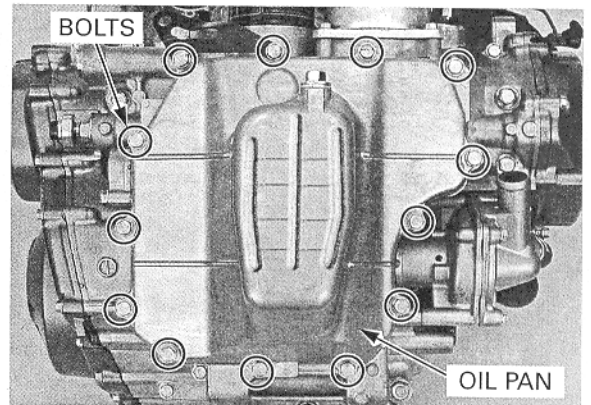

Remove the pressure relief valve and O-ring.

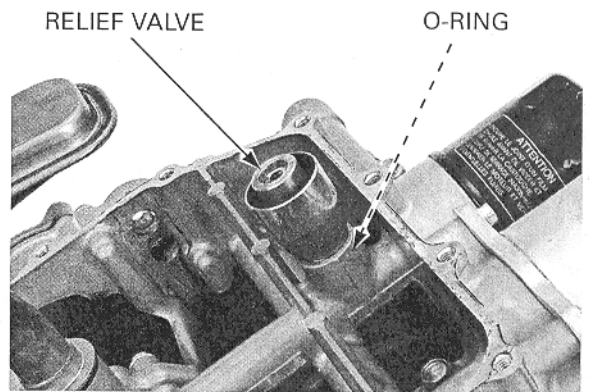

- Remove the oil strainer and oil seal.
- Clean the oil strainer screen.

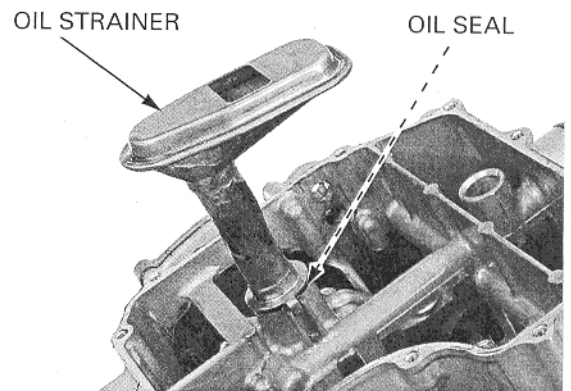

INSPECTION

- Check the operation of the pressure relief valve by pushing on the piston.
- Disassemble the relief valve by removing the snap ring.
- Inspect the piston for wear, unsmooth movement or damage.
- Inspect the spring for fatigue or damage.
- Assemble the relief valve in the reverse order of disassembly.

