


## FUEL SYSTEM (Programmed Fuel Injection)

Install the fuel tank, collars and pivot bolts into the frame and tighten the bolts securely.

Support the fuel tank using a suitable support.

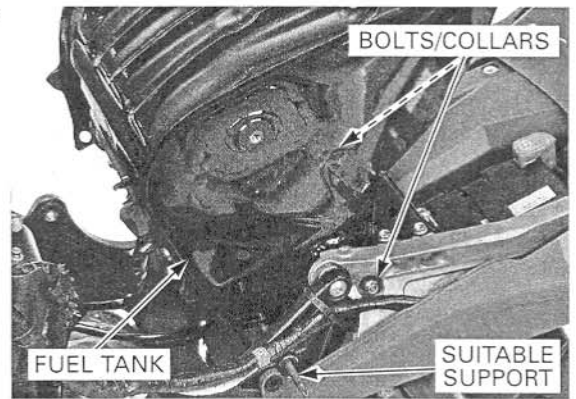


*Align the fuel hose eyelet joint with the stopper on the fuel pump mounting stay.*

Install the new sealing washers and tighten the fuel hose banjo bolt to the specified torque.


**TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)**

*Route the hoses properly (page 1-22).*

Connect the air vent and overflow hoses to the fuel tank.

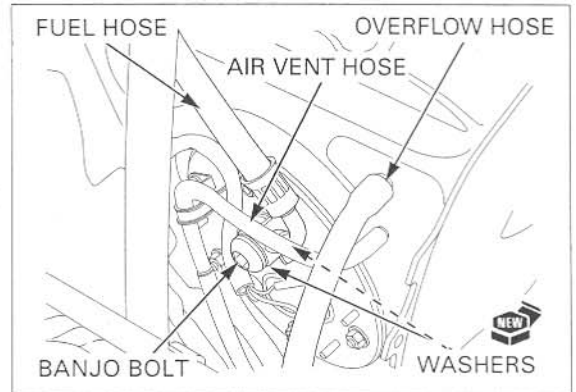

Connect the fuel pump unit 3P (Black) connector.

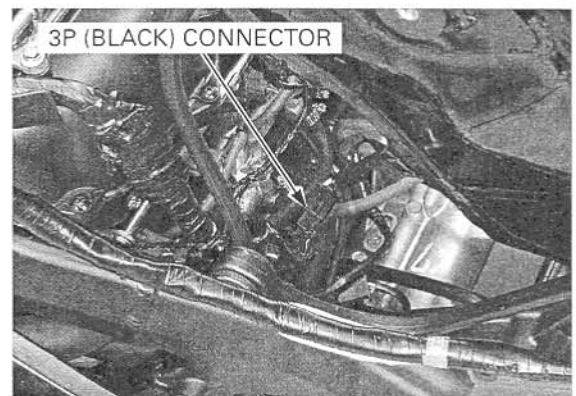

*Be careful not to damage the wire harness, fuel feed hose, overflow hose and air vent hose.*

Remove the suitable support and close the fuel tank on the frame.

*Route the harness, wires and hoses properly (page 1-22).*

