


FUEL SYSTEM (Programmed Fuel Injection)


INSTALLATION

Apply oil to new O-ring and install it into the fuel rail.

Install the fuel hose into the fuel rail.

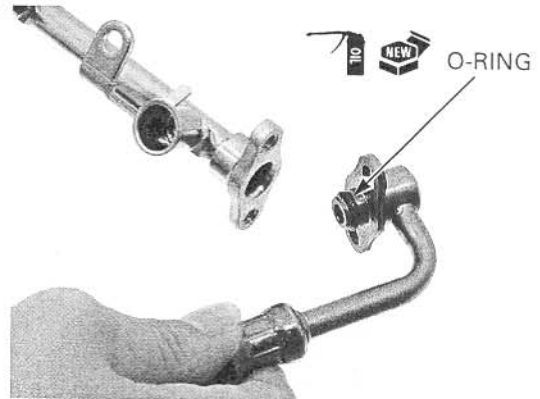

Tighten the bolts securely.

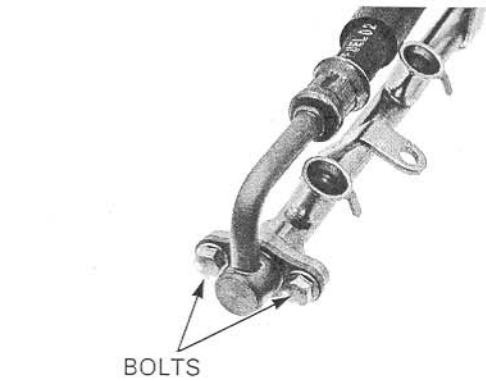

Apply oil to a new O-ring.

Replace the seal ring, cushion ring and O-ring with new ones as a set.

Install the new seal ring, cushion ring and O-ring, being careful not to damage the O-ring.

Check the dust seal for wear or damage, replace it if necessary.

Install the dust seal.



Install the fuel injectors into the fuel rail, being careful not to damage the O-ring and cushion ring.

