


## FUEL SYSTEM (Programmed Fuel Injection)


Install the fuel rail/secondary injector assembly onto the mounting bracket, being careful not to damage the seal rings and tighten the bolts to the specified torque.

**TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)**

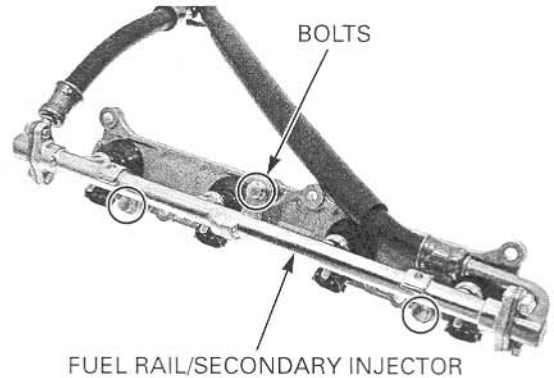

Install the secondary injector mounting bracket onto the air cleaner housing and tighten the bolts to the specified torque.


**TORQUE: 5.4 N·m (0.55 kgf·m, 4 lbf·ft)**

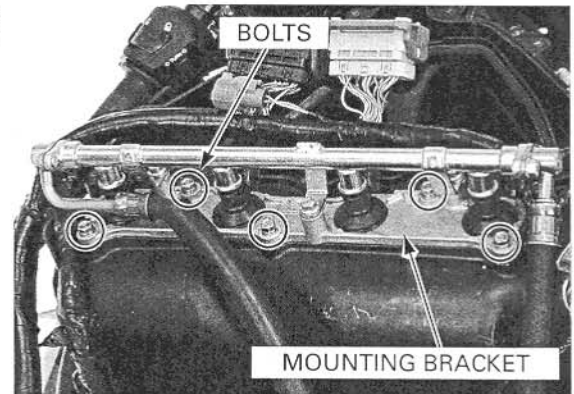

Connect the fuel hose to the fuel rail with new sealing washers. Install and tighten the sealing nut to the specified torque.

**TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)**

- Do not apply excessive force to the fuel rail.
- Always hold the fuel rail nut while tightening the fuel hose sealing nut.

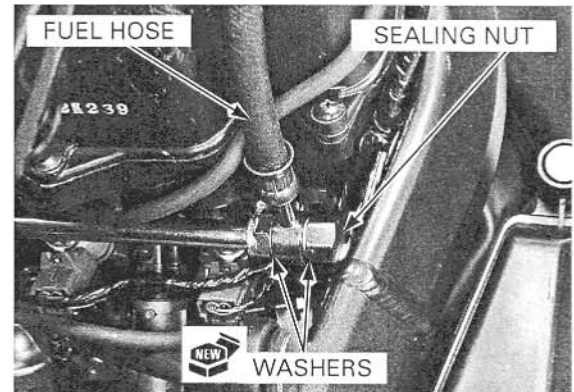

Connect the secondary injector connectors.

Install the removed parts in the reverse order of removal.

