


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Clutch spring

Replace the clutch springs as a set.


Measure the clutch spring free length.

SERVICE LIMIT: 45.2 mm (1.78 in)

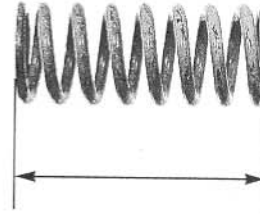

Clutch center

Check the grooves of the clutch center for damage or wear caused by the clutch plates. Replace it if necessary.

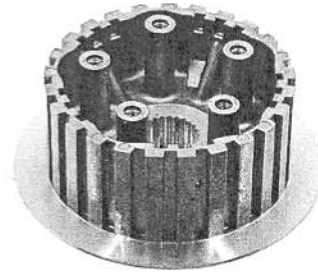

Clutch lifter piece

Check the clutch lifter piece for damage or abnormal wear.



Clutch disc

Replace the clutch discs and plates as a set.

Replace the clutch discs if they show signs of scoring or discoloration.

Measure the disc thickness of each disc.

SERVICE LIMIT: 2.6 mm (0.10 in)

