



## CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE


Install the four dowel pins.

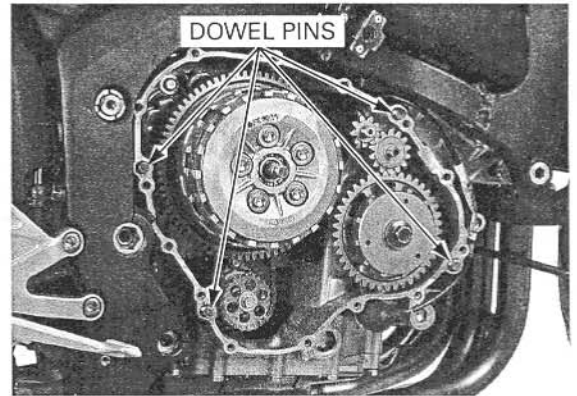

Install the wave washer and thrust washer onto the starter idle gear.

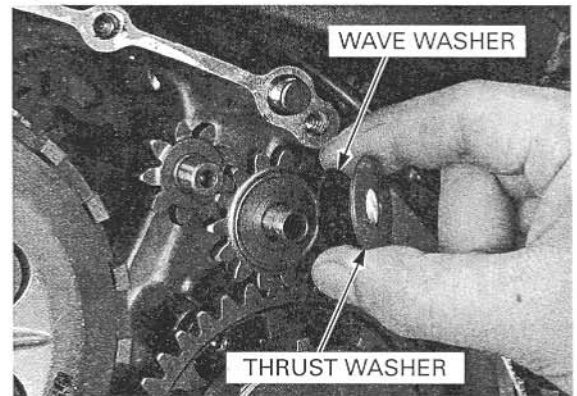

Install the right crankcase cover while turning the lifter lever clockwise to engage the lifter lever spindle groove with the lifter piece flange.

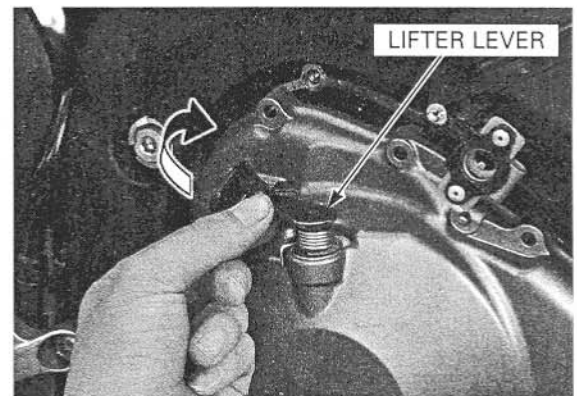

Install the radiator reserve tank stay and right crankcase cover bolts.

Tighten the right crankcase cover bolts crisscross pattern in two to three steps.

