


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Connect the clutch cable end to the clutch lifter lever, then install the clutch cable guide plate with the bolt.

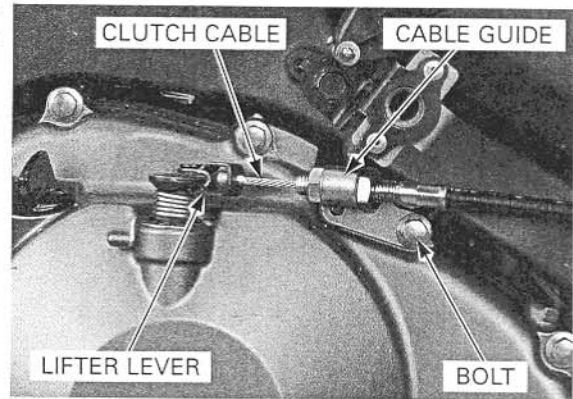

Connect the ignition pulse generator 2P (Red) connector.

Add the recommended engine oil (page 4-16).

Install the following:

- Radiator reserve tank (page 7-18)
- Middle cowls (page 3-8)
- Lower cowls (page 3-6)

Adjust the clutch lever free play (page 4-28).

