


FRONT WHEEL/SUSPENSION/STEERING


Tighten the forward screw first, then the rear screw.

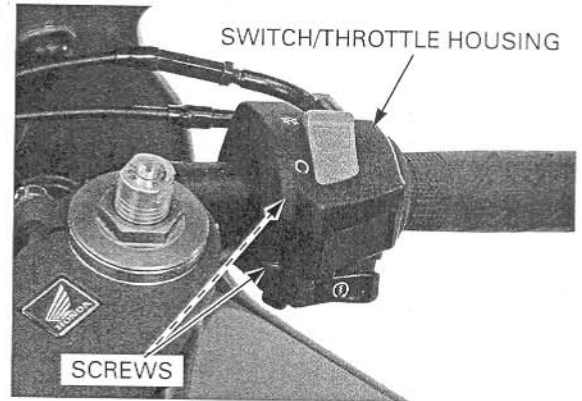

Install the master cylinder by aligning the end of the master cylinder with the punch mark on the handlebar. Install the master cylinder holder with its "UP" mark facing up. Tighten the upper bolt first, then the lower bolt.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the front brake switch wire connectors.

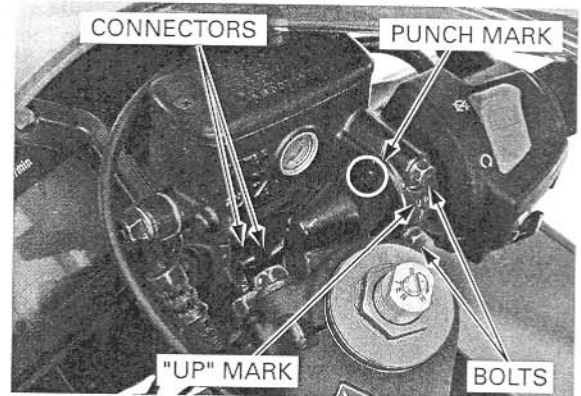

Install the handlebar weights on both handlebars and tighten the new mounting screws to the specified torque.

TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)

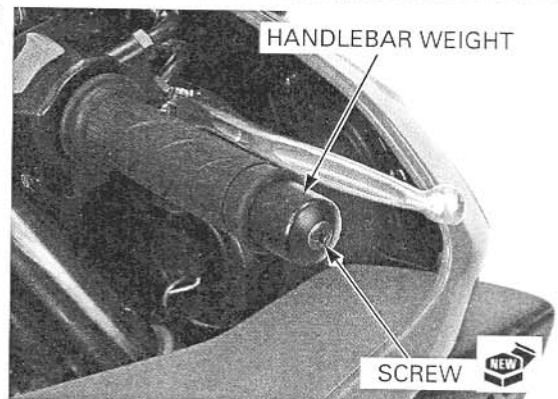

FRONT WHEEL

REMOVAL

Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.

Remove the brake caliper mounting bolts and both brake calipers.

Do not operate the brake lever after the brake caliper is removed.

Support the brake caliper with a piece of wire so that it does not hang from the brake hose. Do not twist the brake hose.

