


ASSEMBLY

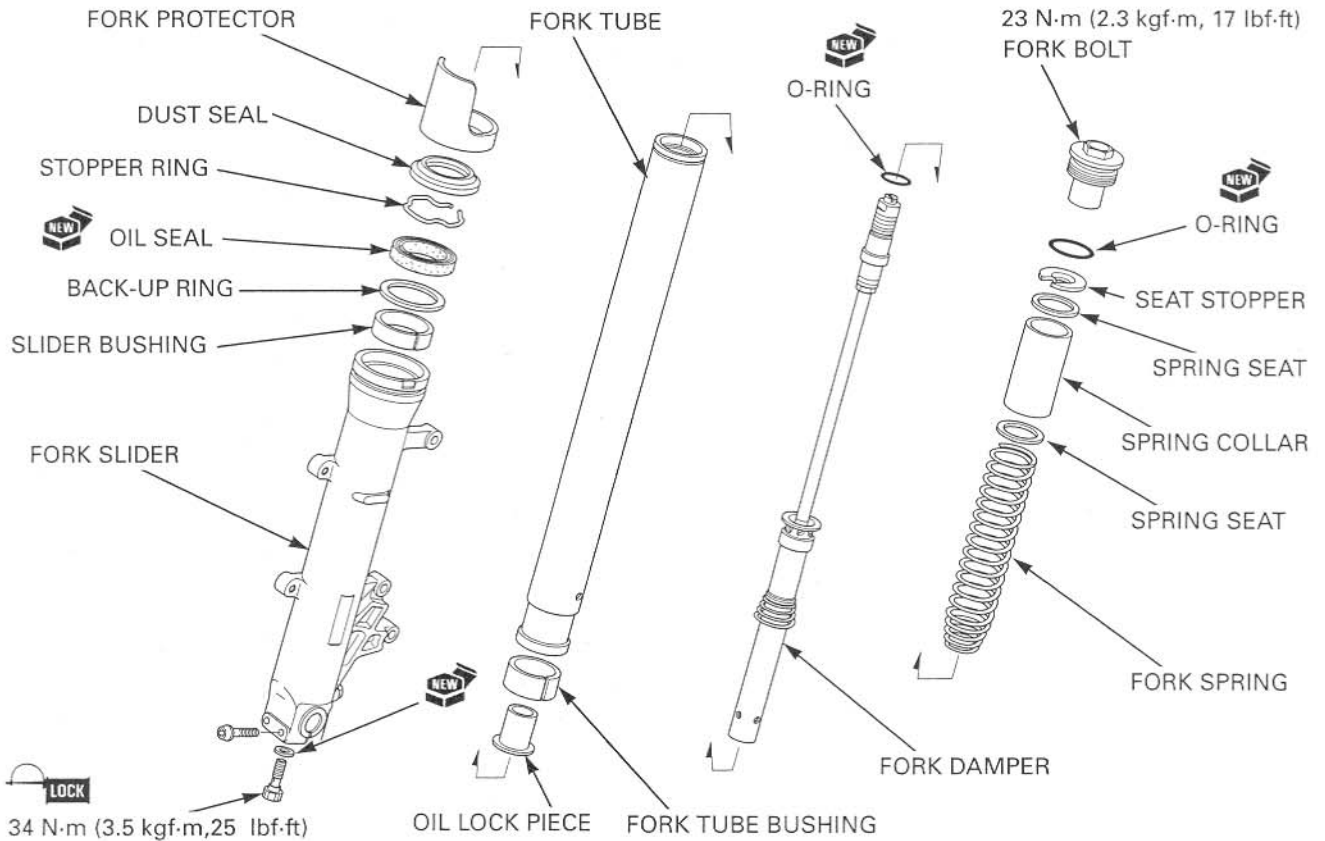

Before assembly, wash all parts with a high flash or non-flammable solvent and wipe them dry.

*Do not open the bushing slit more than necessary.*

Install the new fork tube bushing being careful not to damage the coating of the bushing if it has been removed.

Remove the burrs from the bushing mating surface, being careful not to peel off the coating.

*Install the oil seal with its marked side facing up.*

Install the slider bushing, back-up ring and new oil seal onto the fork tube.

Install the oil lock piece into the fork tube.

Apply fork fluid to the oil seal lips.  
Install the fork tube into the fork slider.

