



## REAR WHEEL/SUSPENSION

Loosen the swingarm right pivot pinch bolt and remove the swingarm pivot nut.

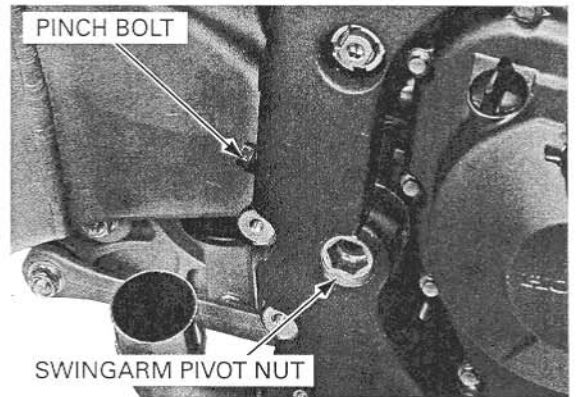


Loosen the swingarm left pivot pinch bolt. Remove the pivot shaft and the swingarm.

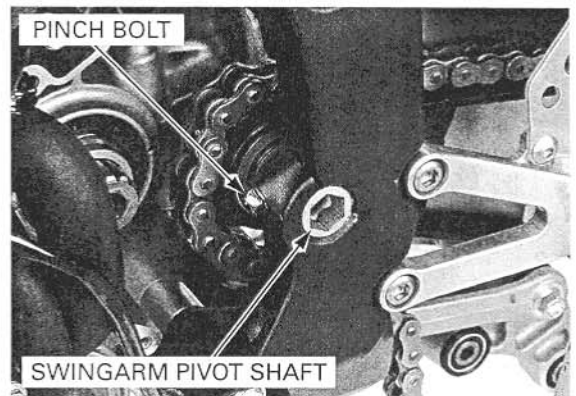

### DISASSEMBLY/INSPECTION

Remove the two bolts and rear inner fender.

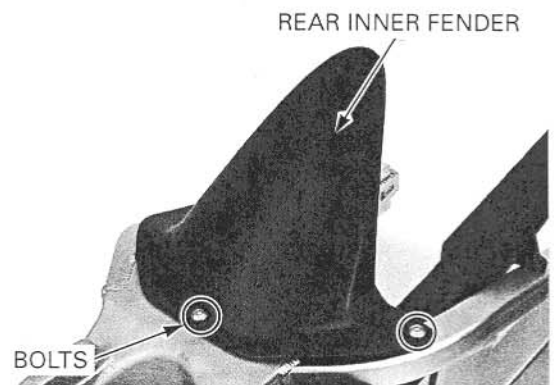

Remove the three bolts and drive chain guard.

