



ASSEMBLY

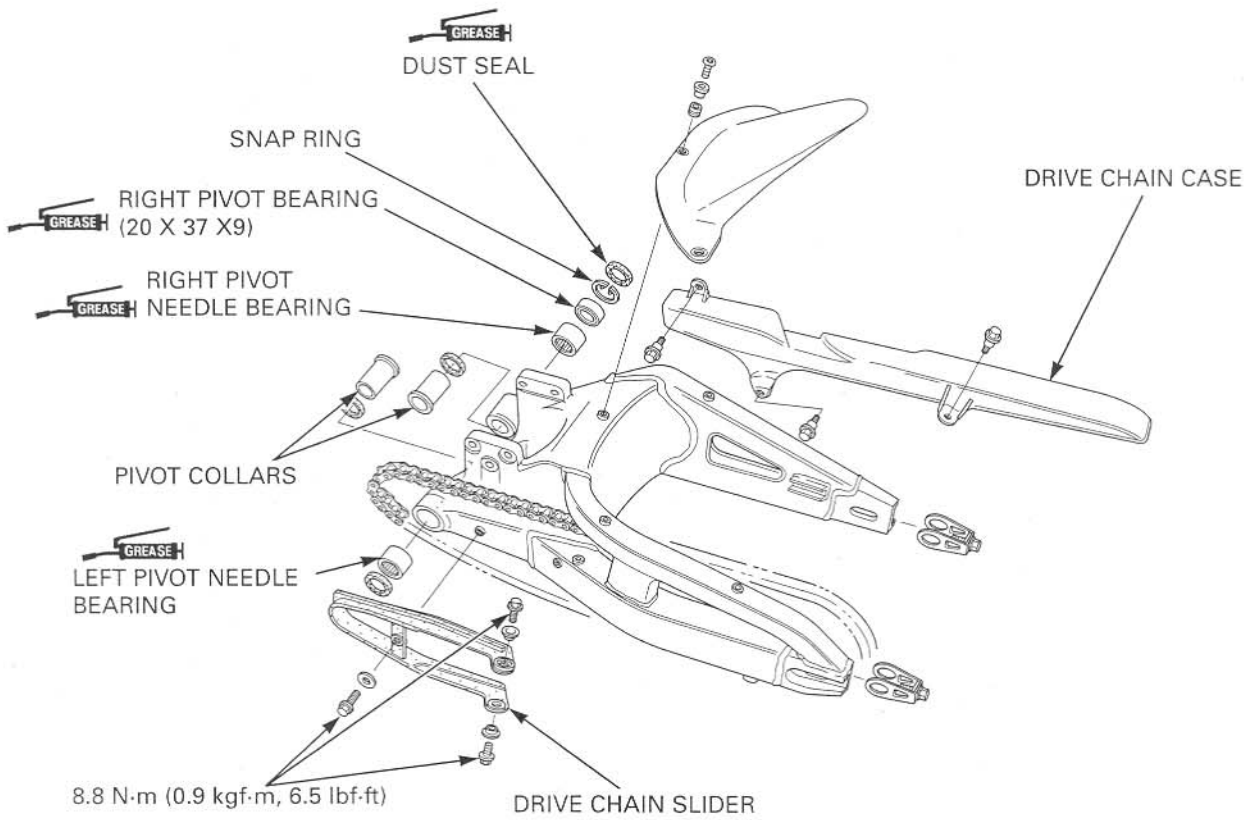

Apply grease to the dust seal lips, then install the dust seals and pivot collar into the right swingarm pivot.

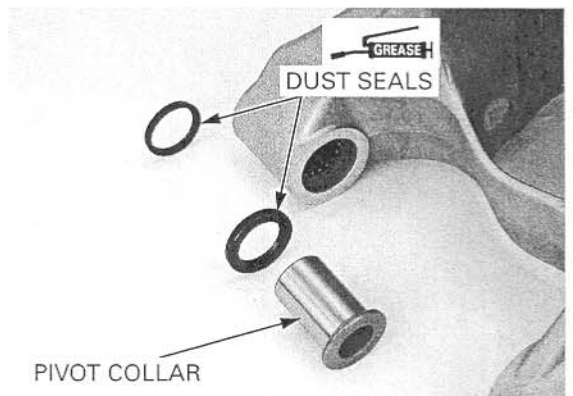

Apply grease to the dust seal lips, then install the dust seals and pivot collar into the left swingarm pivot.

