

HYDRAULIC BRAKE

BRAKE FLUID REPLACEMENT/ AIR BLEEDING

NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


- Do not allow foreign material to enter the system when filling the reservoir.

BRAKE FLUID DRAINING


Remove the upper cowl (page 3-9).

For the front brake, turn the handlebar until the reservoir is parallel to the ground, before removing the reservoir cap.

Remove the screws and reservoir cap.

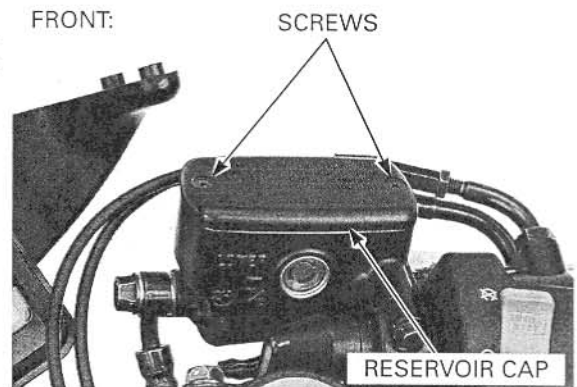

Remove the diaphragm plate, diaphragm and float.

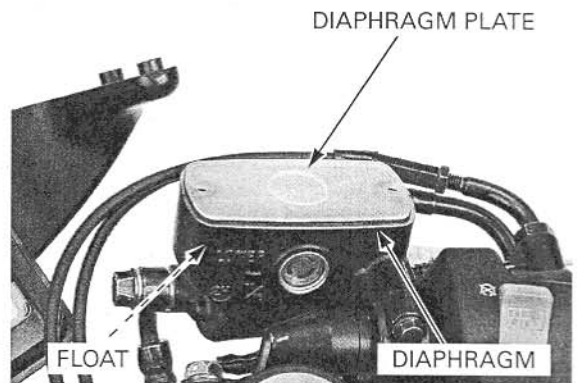

Remove the rear cowl (page 3-5).

For the rear brake, remove the screws and reservoir cap.

