

FRONT MASTER CYLINDER

NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


REMOVAL

Drain the front hydraulic system (page 16-6).


Disconnect the brake light switch wire connectors.

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

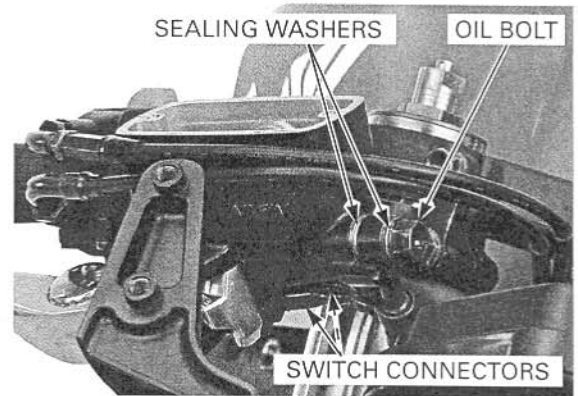

Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

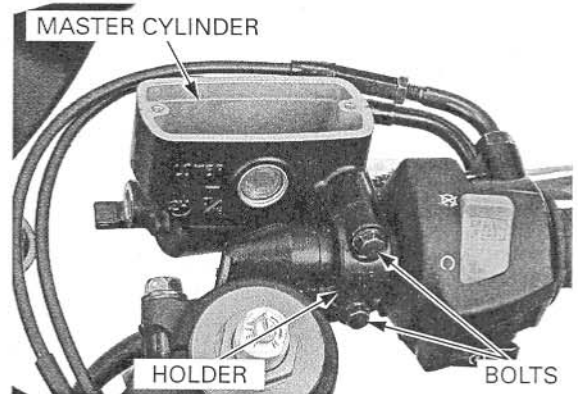

DISASSEMBLY

Remove the pivot bolt/nut and brake lever assembly.

