


**INSPECTION**

Check the piston boot, primary cup and secondary cup for fatigue or damage.  
 Check the master cylinder and piston for abnormal scratches.  
 Measure the master cylinder I.D.

**SERVICE LIMIT: 17.515 mm (0.6896 in)**

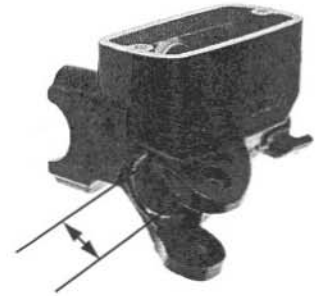

Measure the master cylinder piston O.D.

**SERVICE LIMIT: 17.309 mm (0.6815 in)**



**ASSEMBLY**

