


## HYDRAULIC BRAKE

Apply silicone grease to the contact surfaces of the brake lever and piston tip.

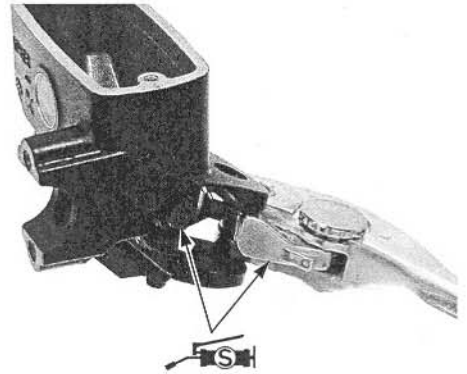


Apply silicone grease to the brake lever pivot bolt sliding surface.

Install the brake lever assembly, tighten the pivot bolt to the specified torque.

**TORQUE: 1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)**

Hold the pivot bolt and tighten the pivot nut to the specified torque.

**TORQUE: 5.9 N·m (0.6 kgf·m, 4.3 lbf·ft)**

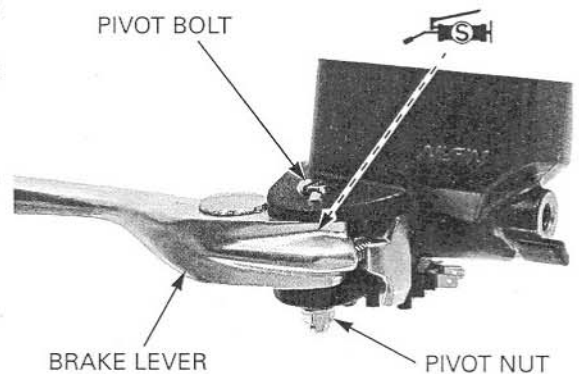


Place the master cylinder assembly on the handlebar.

Align the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with its "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt to the specified torque.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

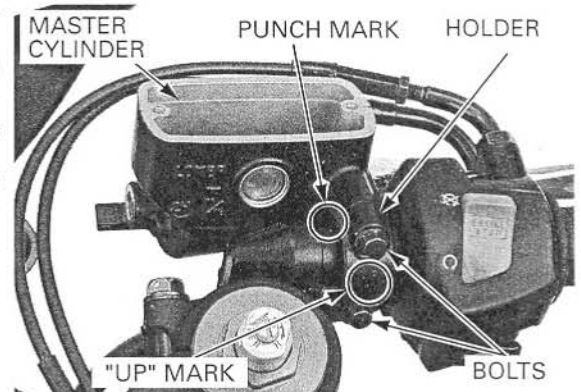

Install the brake hose eyelet with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

**TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)**

Connect the brake light switch wire connectors.

Fill brake fluid and bleed air the front brake hydraulic system (page 16-7).

