



Apply brake fluid to a new O-ring and install it onto the reservoir joint.
Install the reservoir joint into the master cylinder.

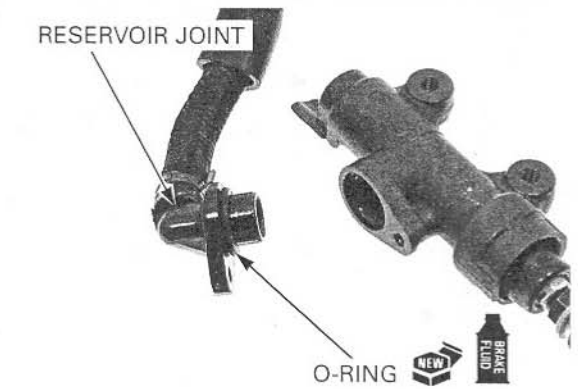


Apply a locking agent to the reservoir joint screw threads.
Tighten the screw to the specified torque.

TORQUE: 1.5 N·m (0.15 kgf·m, 1.1 lbf·ft)

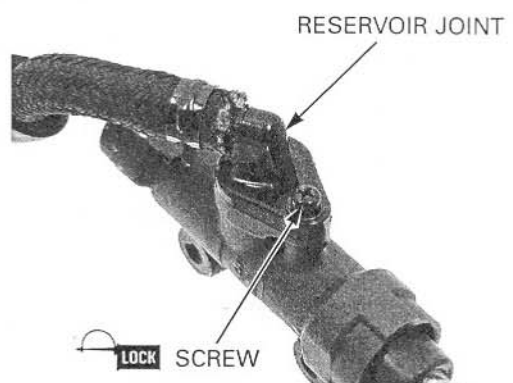

INSTALLATION

Connect the brake pedal to the push rod lower joint.
Install the bolt, washers, nut and tighten the nut securely.
Install a new cotter pin.

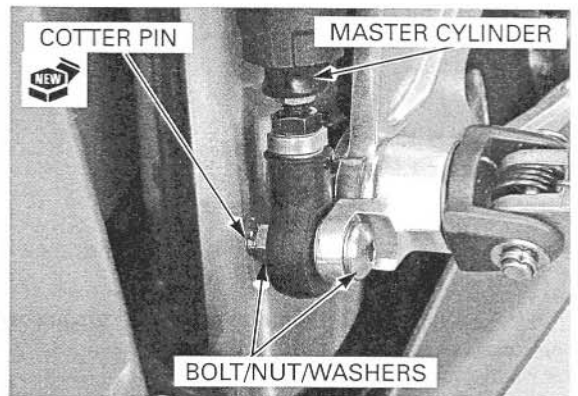

Install the master cylinder and guard plate, tighten the bolts to the specified torque.

TORQUE: 8.8 N·m (0.9 kgf·m, 6.5 lbf·ft)

Install the brake hose with the oil bolt and new sealing washers.
Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

