


REMOVAL/INSTALLATION

Disconnect the alternator 3P (Natural) connector.
Disconnect the regulator/rectifier 4P (Natural) connector.

Remove the bolts and regulator/rectifier unit stay.

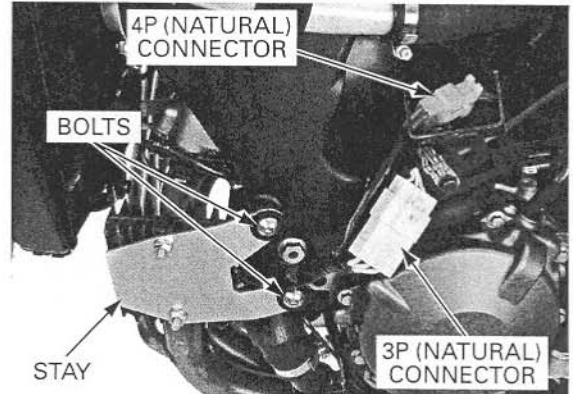

Remove the bolts, nuts and regulator/rectifier unit from the mounting stay.

Install the regulator/rectifier unit in the reverse order of removal.

