


## TURN SIGNAL

### BULB REPLACEMENT


Remove the screw.

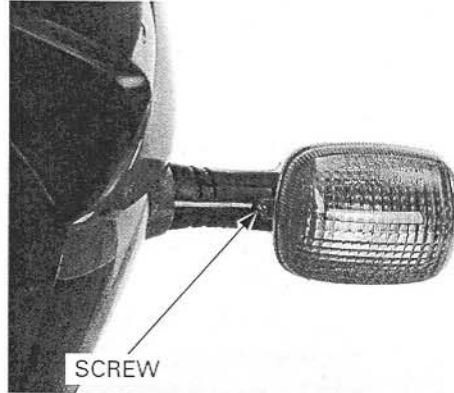

Remove the turn signal lens and seal rubber.

While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.

Install the seal rubber on the lens.  
Install the lens by aligning the lens tab with the turn signal unit groove.

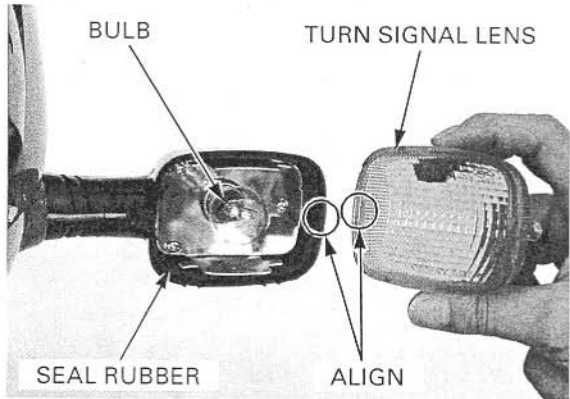

### REMOVAL/INSTALLATION

For front turn signal unit removal, see upper cowl disassembly (page 3-11).

For rear turn signal removal, remove the rear fender B (page 3-16).

Remove the screw and guard plates.  
Remove the turn signal mounting nut.  
Release the turn signal wire and remove the turn signal unit.

*Route the turn signal wire properly (page 1-22).*

Install the turn signal unit in the reverse order of removal

