


BRAKE/TAIL LIGHT

INSPECTION

Turn the ignition switch ON, and check the tail light operation.

Check that all LED in the brake/tail light unit light illuminate with the front brake lever and/or rear brake pedal applied.

If any LED does not turn on, replace the brake/tail light assembly.

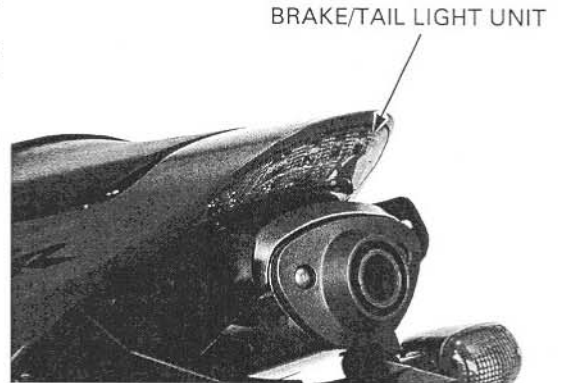


REMOVAL/INSTALLATION


Remove the rear cowl (page 3-5).

Remove the brake/tail light unit mounting screws. Pull out the tabs from the grooves of rear cowl, then remove the brake/tail light unit.

BRAKE/TAIL LIGHT UNIT

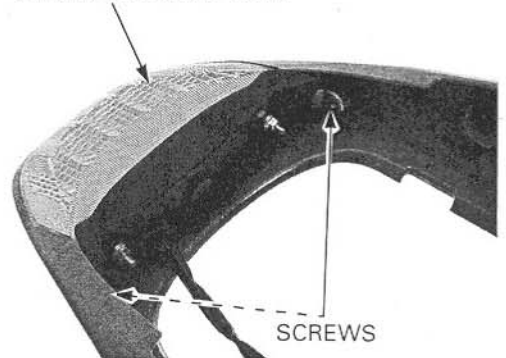

Remove the two nuts, two stays and brake/tail light.

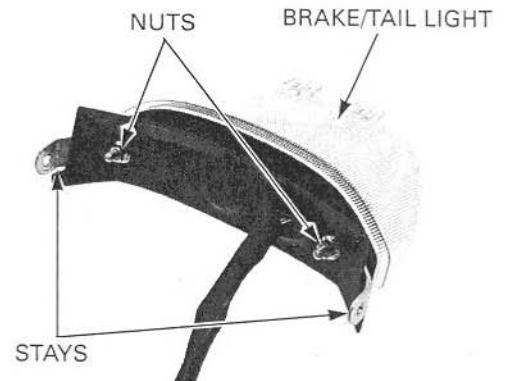

Install the brake/tail light unit onto the rear cowl while aligning the tabs with groove of the rear cowl.

Installation is in the reverse order of removal.

