


## HEADLIGHT RELAY

### INSPECTION

Remove the head light (page 20-7).

Disconnect the headlight relay 4P connector, then remove the headlight relay.

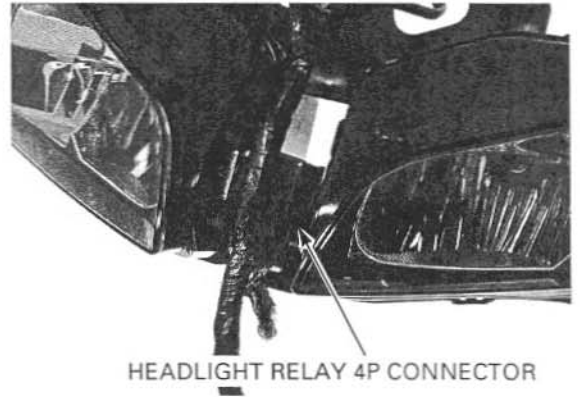

Connect the ohmmeter to the headlight relay connector terminals.

**CONNECTION: Black/red – Blue**

Connect the 12V battery to the following headlight relay connector terminals.

**CONNECTION: White – Green**

There should be continuity only when the 12V battery is connected.

If there is no continuity when the 12V battery is connected, replace the headlight relay.

