



MAINTENANCE SCHEDULE

Perform the pre-ride inspection in the Owner's Manual at every maintenance period.

ITEM	FREQUENCY	WHICHEVER COMES FIRST (1)	(2) ODOMETER READING [NOTE (32)]				
			1,000 km (600 miles)	6,000 km (3,600 miles)	12,000 km (7,200 miles)	18,000 km (10,800 miles)	
(3) ENGINE OIL	(27) YEAR	EVERY	R	(29) Replace every 300 km (1,800 miles)			Page 2-3
(4) ENGINE OIL SCREEN					C		Page 2-3
(5) AIR CLEANER	NOTE (31)			C	C	C	Page 2-3
(6) FUEL LINES				I	I	I	Page 3-4
(7) SPARK PLUGS				I	R	I	Page 3-4
(8) VALVE CLEARANCE			I	I	I	I	Page 3-4, 3-5
(9) CONTACT BREAKER POINTS			I	I	I	I	Page 3-6
(10) IGNITION TIMING			I	I	I	I	Page 3-6, 3-7
(11) CAM CHAIN TENSION			A	A	A	A	Page 3-7
(12) THROTTLE OPERATION			I	I	I	I	Page 3-7
(13) CARBURETOR IDLE SPEED			I	I	I	I	Page 3-8
(14) CARBURETOR CHOKE				I	I	I	Page 3-16
(15) DRIVE CHAIN	NOTE (33)		(30) Inspect every 1,000 km (600 miles)				Page 3-9
(16) BATTERY ELECTROLYTE	(28) MONTH		I	I	I	I	Page 3-9
(17) BRAKE SHOE WEAR				I	I	I	Page 3-10, 3-11
(18) BRAKE FREEPLAY			I	I	I	I	Page 3-10, 3-11, 3-12
(19) BRAKE LIGHT SWITCH			I	I	I	I	Page 3-12
(20) HEADLIGHT AIM			I	I	I	I	Page 3-14
(21) CLUTCH FREE PLAY			I	I	I	I	Page 3-13
(22) SIDE STAND				I	I	I	Page 3-14
(23) SUSPENSION			I	I	I	I	Page 3-15
(24) NUTS, BOLTS, FASTENERS			I	I	I	I	
(25) WHEELS/SPOKES			I	I	I	I	Page 3-16
(26) STEERING HEAD BEARING			I		I		Page 3-15

- I: INSPECT, CLEAN, ADJUST, OR REPLACE IF NECESSARY.
- C: CLEAN
- R: REPLACE
- A: ADJUST

- NOTES: (31) More frequent service may be required when riding in dusty areas.
 (32) For higher odometer readings, repeat at the frequency interval established here.
 (33) Initial service period 300 km (200 miles)