





IGNITION SWITCH

Remove the headlight and disconnect the headlight switch coupler (white coupler).

(1) WIRE COLOR (2) SWITCH POSITION	(3) RED	(4) BLACK	(5) BROWN/WHITE	(6) BROWN
 OFF				
 IGNITION	○	○	○	○
 P	○			○

There should be continuity as indicated by O—O in the table.

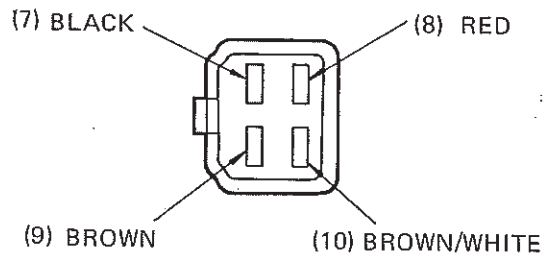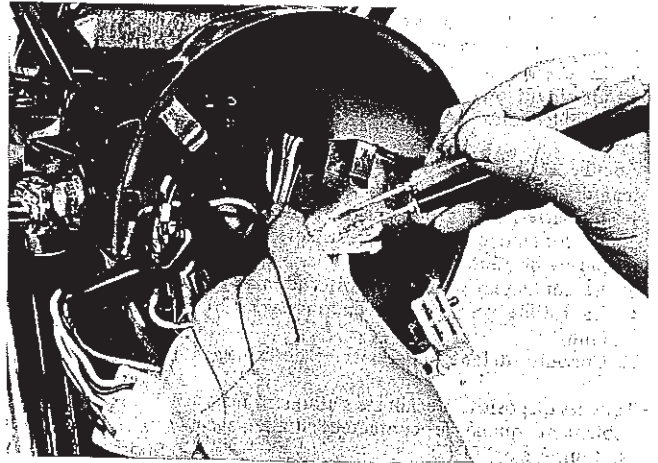

TURN SIGNAL SWITCH

Disconnect the winker switch coupler (red coupler).

(1) WIRE COLOR (2) SWITCH POSITION	(3) GREY	(4) ORANGE	(5) LIGHT BLUE
 L	○	○	
 OFF			
 R			○

There should be continuity as indicated by O—O in the table.

