

Contents

1. Service data

Specifications	1-1
Service data.....	1-2
Torque Values.....	1-5
Tools	1-7
Special.....	1-7
Lubrication & Seal Points.....	1-8
Cable & Harness Routing	1-11

2. Service and maintenance

Maintenance schedule.....	2-1
Fuel Line	2-3
Air Cleaner	2-3
Spark Plug	2-4
Valve Clearance	2-4
Engine Oil/Oil Filter	2-6
Engine Idle Speed	2-8
Transmission Oil.....	2-8
Coolant.....	2-9
Clutch System	2-10
Exhaust Pipe And Muffler	2-10
Drive Chain.....	2-11
Drive Chain Slider.....	2-11
Drive/Driven Sprockets.....	2-12
Brake Fluid	2-13
Brake Pad Wear.....	2-14
Brake System.....	2-14
Handlebar And Steering Head Bearings.....	2-15
Wheels And Tires	2-15
Front Suspension.....	2-16
Fork.....	2-16
Rear Suspension.....	2-17
Front headlight and front position light.	2-18

3. Engine servicing

Oil Pressure Relief Valve.....	3-1
Oil Pump	3-1
Disassembly / Installation of fuel feed hose	3-4
Fuel Line Inspection.....	3-5
Fuel Tank/Fuel Pump	3-7
Injector	3-13

5. Electrical servicing

Charging system inspection	5-1
Ignition system inspection	5-3
PGM-FI System inspection	5-5
PGM-FI.....	5-6
PGM-FI Self-diagnosis malfunction indicator lamp (mil) failure codes	5-7
Bank angle sensor inspection	5-8
Engine stop switch inspection	5-9
Cooling fan system inspection	5-9
Lights / instruments / switches.....	5-10
Indicator light/Indicator light relay.....	5-11
Brake light.....	5-12
Brake light switch.....	5-12
Speedometer	5-13
Speed sensor	5-14
Horn	5-15
Wiring diagram.....	5-16

Throttle Body	3-13
Water Seal And Bearing Replacement.....	3-15
Radiator Removal/Installation	3-17
Engine Removal/Installation.....	3-18
Cylinder Compression	3-20
Cylinder Head Removal	3-23
Cylinder Head Disassembly	3-25
Cylinder Head Inspection	3-26
Valve Guide Replacement	3-27
Valve Seat Inspection/Refacing	3-28
Cylinder Head Assembly.....	3-31
Cylinder/Piston.....	3-32
Cylinder Head Installation	3-37
Camshaft/Cylinder Head Cover Installation.....	3-38
Right Crankcase Cover.....	3-40
Clutch Slave Cylinder.....	3-41
Clutch.....	3-43
Kickstarter	3-46
Gearshift Linkage.....	3-47
Left Crankcase Cover.....	3-49
Flywheel	3-52
Crankcase Separation/Disassembly	3-54
Crankshaft/Transmission Inspection	3-56
Crankcase Bearing Replacement	3-56
Transmission Assembly	3-58
Crankcase Combination.....	3-59

4. Frame servicing

Front Wheel.....	4-1
Fork.....	4-2
Steering stem	4-11
Rear Wheel.....	4-14
Shock Absorber.....	4-16
Shock Linkage.....	4-19
Swingarm.....	4-20
Front Brake Pad Replacement.....	4-24
Rear Brake Pad Replacement.....	4-25
Front brake caliper.....	4-27
Rear brake caliper	4-27
Front master cylinder	4-28
Rear master cylinder	4-30
Brake pedal.....	4-30
Clutch master cylinder	4-31