

## TRANSMISSION OIL REPLACEMENT

\* Run engine & drain while still warm

Remove R lower fairing ( 15-3)  
Remove oil level gauge  
Remove oil drain bolt & drain all oil  
Clean drain bolt & reinstall

Torque: 3.0-4.0Kg-m

\* Replace sealing washer if damaged

Insert recommended oil

Transmission capacity	
Oil Replacement	0.55 L
Total Replacment	0.9 L

Oil replacement time is every 2 years

After confirming no leakages, inspect oil level and reinstall R. lower fairing ( 15-5)

## CHAIN & SPROCKETS

\* Always inspect/adjust drive chain with engine stopped

If there is O-ring damage, chain damage, chain roller wear, or pin loosening, then replace chain

Drive Chain Slack

Stop engine  
Place gears in neutral, pull bike up on side stand and check drive chain movement or sprockets

Maximum Play 15-25mm (on side stand)

Adjust by hand as below

Loosen rear axle nut  
Turn adjuster bolt to adjust

