

## INSTALLATION

Apply transmission oil to O ring and install oil pump

\* Ensure foreign particles do not enter oil pump or tubes

Fill oil path tube with engine oil  
Install oil path tube to oil pump

\* Do not forget to install the tube clip

Install oil pump control cable  
Connect oil tube

Connect oil pump solenoid coupler  
(2P mini white)

\* After installing, inspect the following and adjust if necessary:

- Control cable adjustment ( 2-14)
- Oil pump air bleeding
- Oil path tube air bleeding
- Oil leakages

Install fuel tank ( 4-2)  
Install R. Lower fairing ( 15-5)

### OIL PUMP AIR BLEEDING

If air enters the oil system trouble will be caused to the oil lubrication  
Perform air bleeding to the oil pump and oil tube - oil path tube


### OIL TUBE, OIL PUMP AIR BLEEDING

Remove R. Lower fairing ( 15-3)  
Loosen oil pump indicator bleeder bolt and drain oil and air from oil tube and oil pump

If all air is out, then reinstall bleeder bolt

\* When the oil tube is removed and oil cut and air enters the oil tube always bleed air from oil tube and oil pump

\* When bleeding air from oil tube and oil pump, always bleed air from oil path tube also

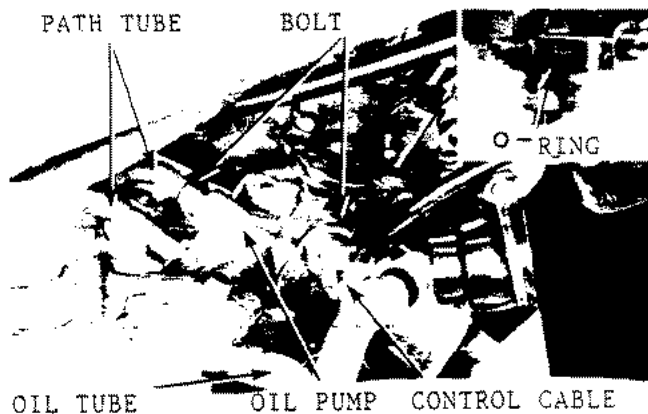

### OIL PUMP SOLENOID COUPLER

