

## FUEL TANK

### Removal

\* Be careful with heat & remove gasoline to avoid spillage

Remove seat ( 15-1)  
Remove breather tube from fuel tank, turn fuel cock off  
Remove side cover protuberance from fuel tank grommet & lift up tank  
Remove fuel tube from fuel cock  
Remove fuel tank mount cover from fuel tank and remove fuel tank

### Installation

Install in reverse order to removal

\* Check that fuel tank mount rubbers are pushed forward so that tank can be installed on frame  
\* Take care not to split or bend breather tube and fuel tube.

