



Insert clutch lifter rod into main shaft
Check clutch lifter arm

* Move clutch lever and arm and check rod movement

Apply grease to steel balls
Insert steel balls into clutch lifter guide
Push clutch lifter guide and steel balls into clutch lifter rod and install


Install 5 clutch springs and install 5 bolts into pressure plate

* Turn opposing bolts 2-3 times to install

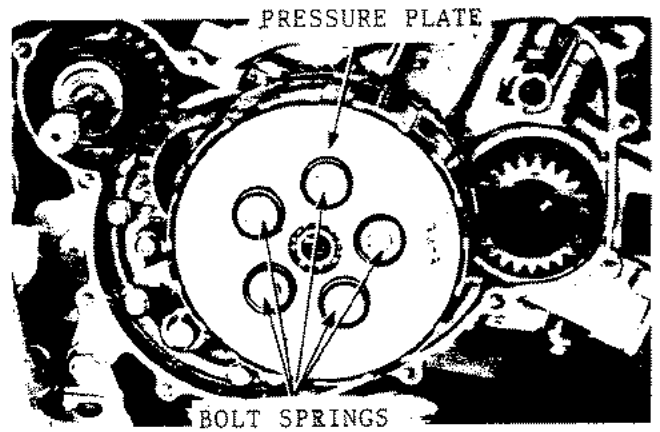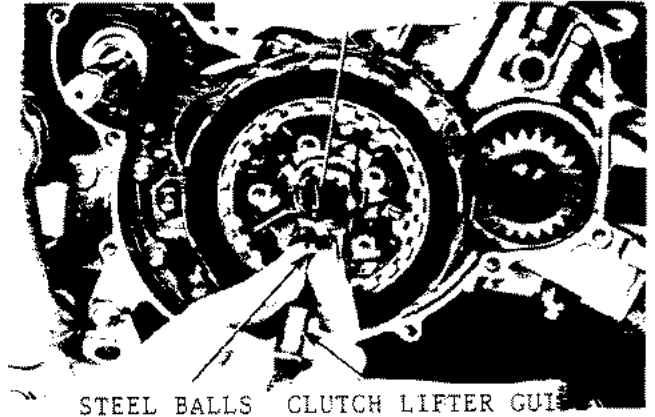

R. CRANKCASE COVER INSTALLATION

Apply grease to oil seal lip

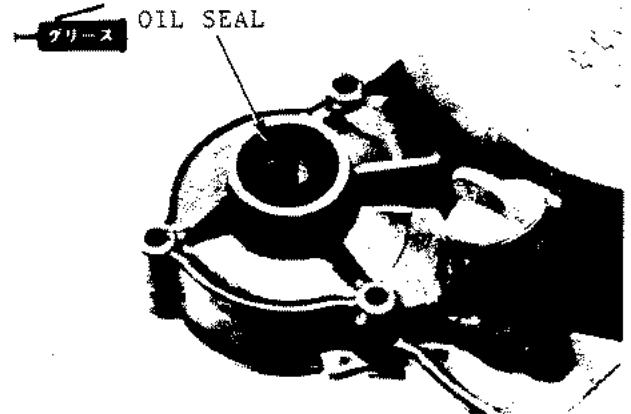

Install knock pin and new gaskets

