


INSTALLATION


Pass the rear cushion from the bottom, between the exhaust chamber and set in the installed position

* Set the breather tube to the rear

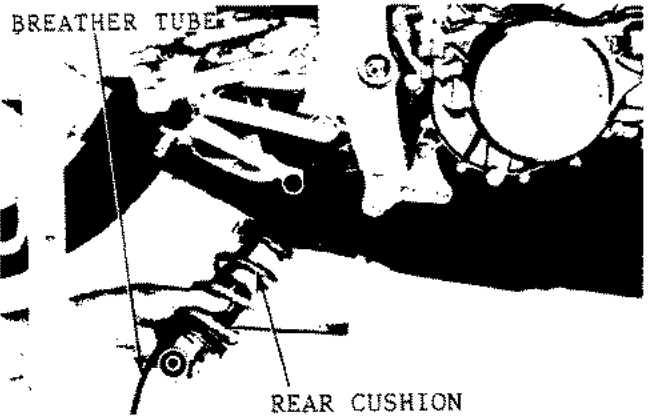

Install upper bolt and nut

Torque: 6.0-7.0 Kg-m

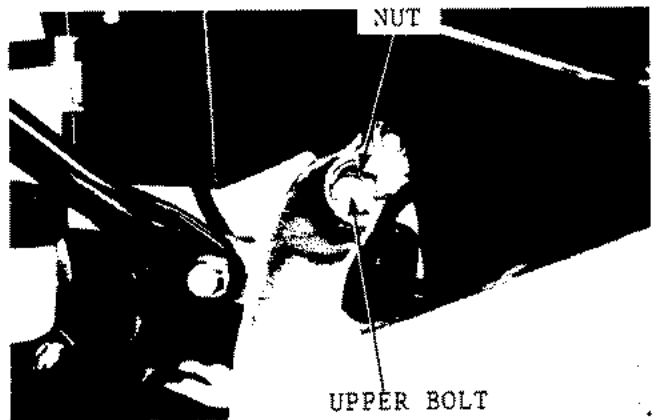


Remove rear wheel from held position
Install rear cushion lower bolt, nut

Torque: 6.0-7.0 kg-m

Install conrod bolt and nut (cushion arm side)

Torque: 6.0-7.0 kg-m

Install R. Lower fairing (15.5)
Install side covers (15.2)

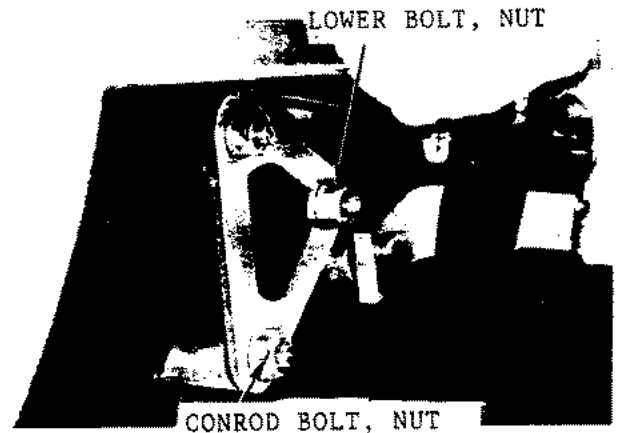

SUSPENSION LINKAGE

Removal

Raise frame and remove rear wheel
Remove conrod bolt (frame & cushion arm sides) and remove cushion conrod
Remove rear cushion lower bolt and cushion arm bolt and remove cushion arm plate.

