



FAIRING

Lower fairing


Remove 5 quick screws
Remove R Lower fairing from stay
Open R lower fairing forward and remove
from L. lower fairing hinge and remove
R. lower fairing

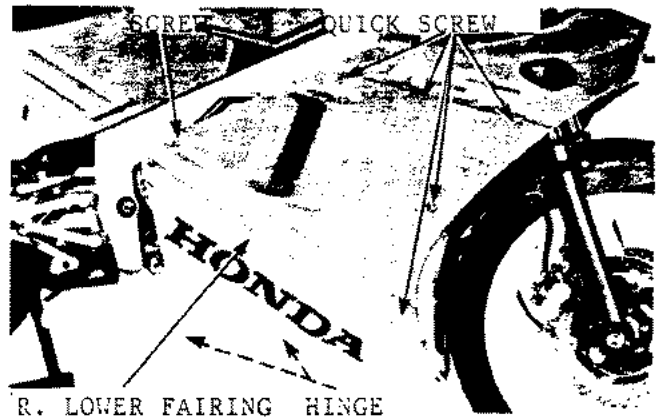

Remove L. lower fairing under engine nut

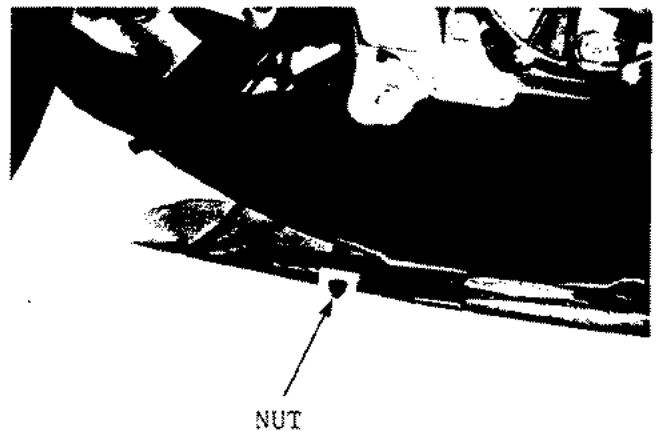

Remove centre lower fairing pinch nut,
screws and lower fairing
Remove L. lower fairing 3 screws
Remove L. lower fairing from stay and remove
L. lower fairing

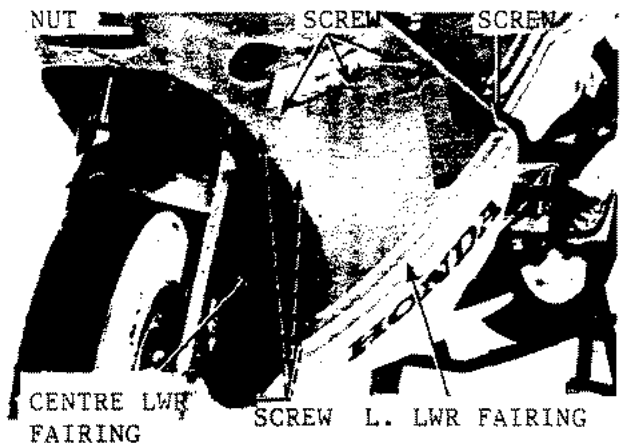

UPPER FAIRING

Remove back mirror pinch nut and remove
mount rubber and back mirror together

