



Remove L and R front winker coupler connection
 Remove position light wire connector
 Remove upper fairing pinch bolt

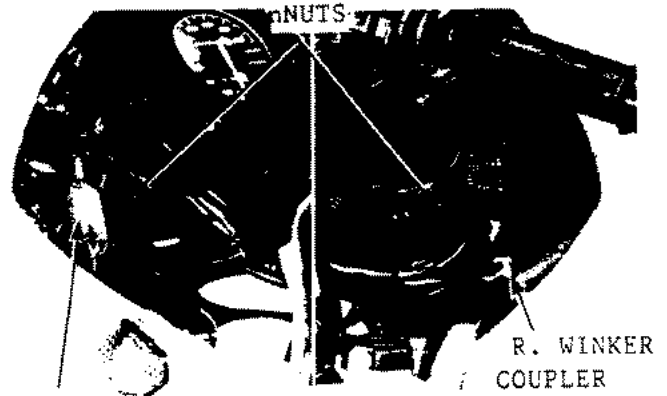


L. WINKER COUPLER, POSITION LIGHT WIRE CONNECTOR

Remove 3 screws, 3 fairing screws and fairing nut and pull out fairing from the front

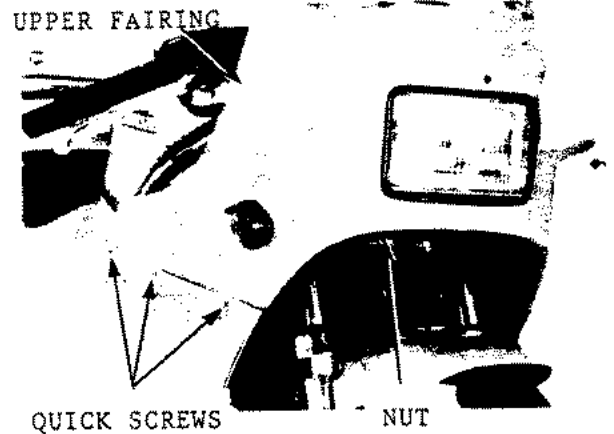

QUICK SCREWS NUT

Remove headlight coupler
 Remove speedometer cable and grommet from the upper fairing and remove upper fairing

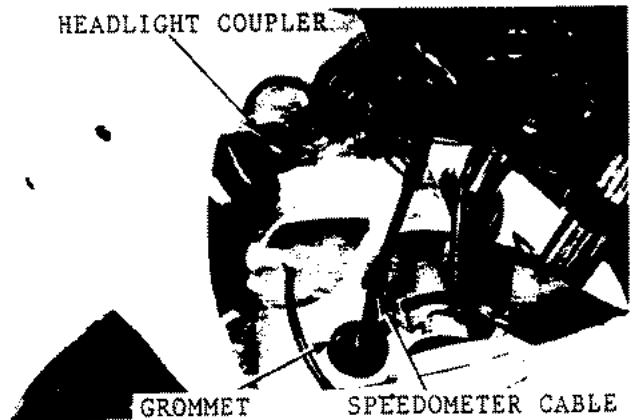

GROMMET SPEEDOMETER CABLE