


EXHAUST CHAMBER

Removal

Remove lower fairing (15.2)
Remove rear cylinder exhaust chamber joint nut, pinch bolt and silencer pinch bolt
Remove rear cylinder exhaust chamber

In the same way, remove the front cylinder exhaust chamber

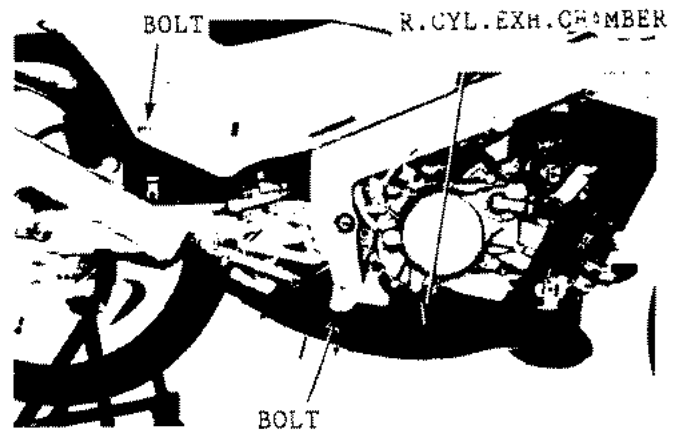


Removal

Inspect spring seat B for wear
If any abnormalities, htne replace exhaust chamber. Replace spring seat A with a new one
After cleaning spring seat A,B assemble facein the muffler, then install


When installing, tighten the following bolts, nuts.

- cylinder and muffler pinch bolts
- muffler body pinch bolt
- silencer muffler pinch bolt

*After cleaning all removed parts, then reinstall

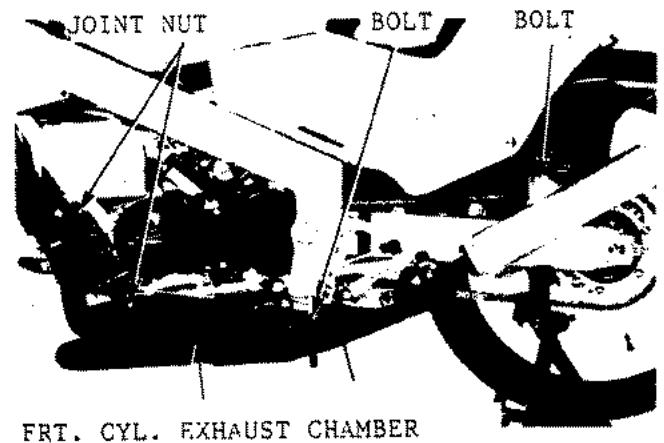

SPRING SEAT B

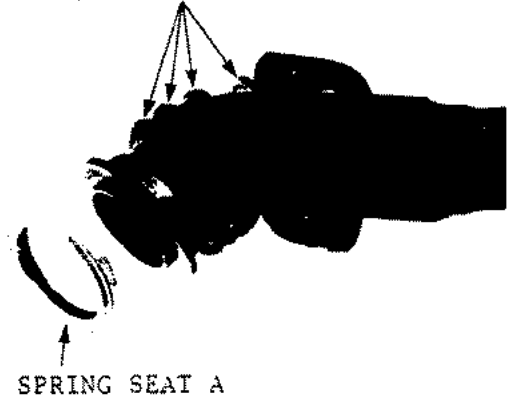

Torques:

Exhaust Chamber pinch bolt	2.4-3.0 kg-m
Silencer pinch bolt	2.4-3.0 kg-m

SILENCER REPLACEMENT

Remove silencer pinch bolt
Remove 3 silencer joint bolts and remove silencer from exhaust chamber

