

Tools

• Refer to "Ball bearing replacement" in section 1 of the Common Service Manual.

Description	Tool Number	Application	Section
Float level gauge	07401-0010000	Carburetor float level inspection	5
Clutch center holder	07724-0050001	Drive pulley face removal/installation	8
Universal holder	07725-0030000	Clutch outer removal/installation	
Clutch spring compressor	07960-KM10000	Clutch/driven pulley disassembly/assembly	
Lock nut wrench, 39 x 41 mm	07GMA-KS40100		
Bearing driver	07945-GC80000	Driven face outer bearing installation	
Crankcase assembly collar	07965-GM00100	Driveshaft installation	9
Crankcase assembly shaft	07965-GM00300		
Shaft protector	07931-1870000	Driveshaft removal	
Case puller	07935-GK80000	Crankcase separation	10
Case/driven gear puller	07935-KG80000	Crankshaft removal	
Universal bearing puller	07631-0010000	Crankshaft bearing removal	
Shaft protector	07931-1870000	Crankcase separation, crankshaft removal	
Crankcase assembly collar	07965-GM00100	Crankshaft installation	
Crankcase assembly shaft	07965-1660200		
Crankcase assembly collar	07965-GM00100	Crankcase assembly	
Crankcase assembly shaft	07965-GM00300		
Lock nut wrench A	07916-KM10000	Steering stem lock nut removal/installation	11
Lock nut wrench B	07916-1870100		
Ball race remover	07946-GA70000	Steering head ball race removal	
Driver	07749-0010000	Steering head ball race installation	
Attachment, 42 x 47 mm	07746-0010300		
Snap ring pliers	07914-3230001	Fork disassembly/Assembly	
Universal holder	07725-0030000	Flywheel removal/installation	13
Flywheel puller	07733-0010000	Flywheel removal	