
2. Frame/Body Panels/Exhaust System

Service Information	2-1	Fuel Tank Removal/Installation	2-8
Troubleshooting	2-1	Muffler Removal/Installation	2-9
Frame Cover Removal/Installation	2-2		

Service Information

⚠ WARNING

- **Gasoline is extremely flammable and explosive under certain conditions.**
- **Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.**

- Work in a well ventilated area. Smoking or allowing flames or sparks in the working area or where gasoline is stored can cause a fire or explosion.
- This section covers removal and installation of the frame covers, fuel tank and exhaust system. Frame cover installation is in the reverse order of removal, unless noted otherwise.
- When removing the cover, be careful not to damage any tab or groove of a cover.
- Always inspect the exhaust system for leaks after installation.

Troubleshooting

Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

Poor performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler