

## Frame/Body Panels/Exhaust System

### Luggage Box

#### NOTE

- The luggage box can be removed together with the seat.

Open the seat.

Remove the two screws and the battery cover.


Open the body cover lid.

Remove the oil tank cap and seal rubber.

Remove the five bolt and the luggage box.

#### NOTE

- After removing the luggage box, install the seal rubber and oil tank cap to prevent dirt and dust from entering the oil tank.

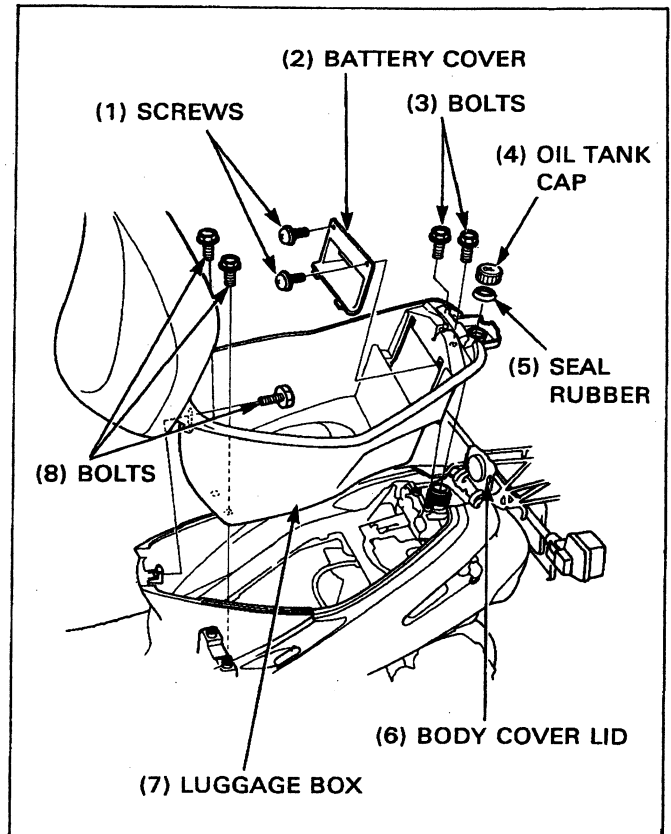

### Center Cover

Remove the luggage box.

Slide the center cover upward to release the two tabs from the frame body cover and remove the center cover.

Open the fuel tank lid.

Remove the two screws and the fuel tank lid.

