

Maintenance

Oil Pump and Oil Line

Oil Pump Control Cable Adjustment

NOTE

- The oil pump control cable should be adjusted after the throttle grip free play adjustment.


Remove the center cover (page 2-4).

Open the throttle fully and check that the aligning mark on the oil pump control lever is aligned with the index mark on the oil pump body.

Adjust by loosening the oil pump control cable lock nut and turning the adjusting nut.

CAUTION

- An adjustment within 1 mm (0.04 in) of the index mark on the open side is acceptable. However, the aligning mark must never be on the closed side of the index mark, otherwise engine damage will occur because of insufficient lubrication.

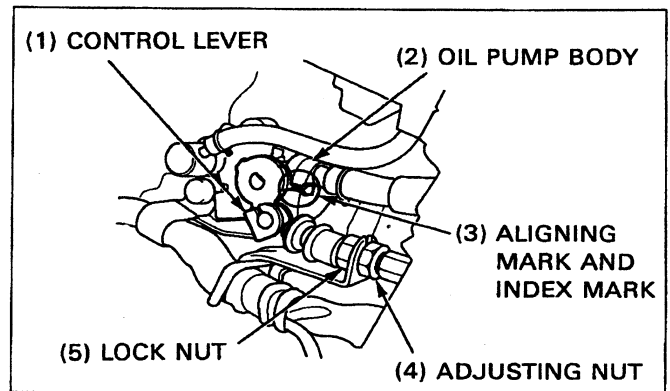

Headlight Aim

⚠ WARNING

- An improperly adjusted headlight may blind on-coming drivers, or it may fail to light the road for a safe distance.

Place the scooter on firm, level ground and support it with the center stand.

Start the engine and allow it to idle.

Make sure that the headlight and taillight are on.

Check the operation of the headlight dimmer (Lo-Hi) switch.

Adjust the headlight beam by turning the horizontal adjusting screws.

CAUTION

- Adjust the headlight beam as specified by local laws and regulations.

