


Reed Valve Removal/Installation

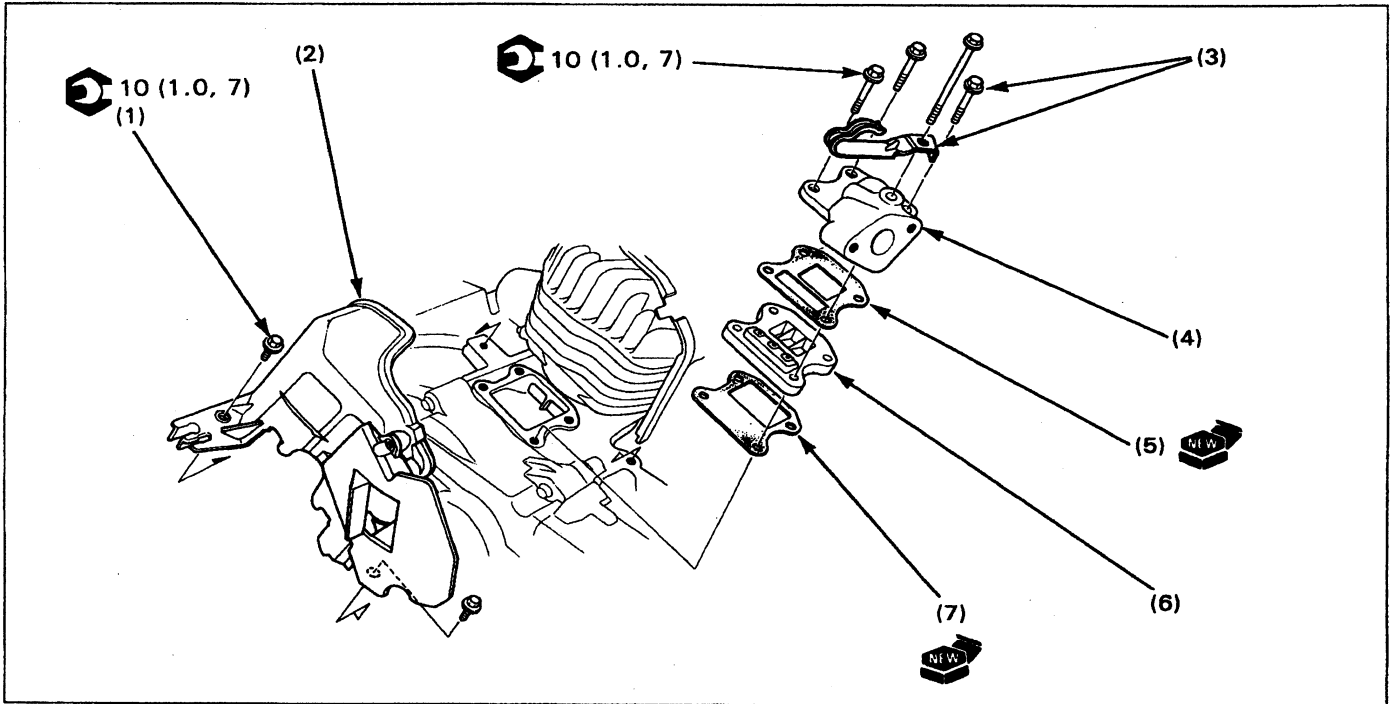

CAUTION

• Do not disassemble or bend the reed stopper. To do so can cause loss of power and engine damage. If the stopper, reed or valve seat is faulty, replace them as a unit.

Requisite Service

• Luggage box removal/installation (page 2-4)

Carburetor removal/installation (page 5-3)

Procedure		Q'ty	Remarks
Removal Order			Installation is in the reverse order of removal.
(1)	Left shroud mounting bolt	2	
(2)	Left shroud	1	
(3)	Intake manifold mounting bolt/clamp	4/1	
(4)	Intake manifold	1	
(5)	Gasket	1	
(6)	Reed valve	1	
(7)	Gasket	1	