
6. Engine Removal/Installation

Service Information

6-1

Engine Removal/Installation

6-2

Service Information

- The following components require engine removal for service:
 - Driveshaft and final gear shaft bearings (section 9)
 - Crankcase (section 10)
 - Crankshaft (section 10)
- After installing the engine, perform the following adjustments:
 - Throttle cable
 - Oil pump control cable (page 3-6)
 - Rear brake cable