
8. Kickstarter/Drive Pulley/Clutch/Driven Pulley

Service Information	8-1	Drive Pulley and Clutch/Driven Pulley Removal/Installation	8-5
Troubleshooting	8-1	Movable Drive Face Disassembly/Assembly	8-7
Left Crankcase Cover Removal/Installation	8-2	Clutch/Driven Pulley Disassembly/Assembly	8-8
Kickstarter Removal/Installation	8-3		

Service Information

NOTE

- Do not apply grease to the movable drive face and weight rollers.

- Avoid getting grease and oil on the V-belt and pulley drive faces in order to prevent belt slippage.
- Never operate the starter motor with the left crankcase front cover removed.

Troubleshooting

Engine starts but scooter won't move

- Worn drive belt
- Damaged ramp plate
- Worn or damaged clutch lining
- Broken driven face spring

Engine stalls or scooter creeps

- Broken clutch shoe spring

Poor performance at high speed or lack of power

- Worn drive belt
- Weak driven face spring
- Worn weight rollers
- Contaminated pulley faces