


Left Crankcase Cover Removal/Installation

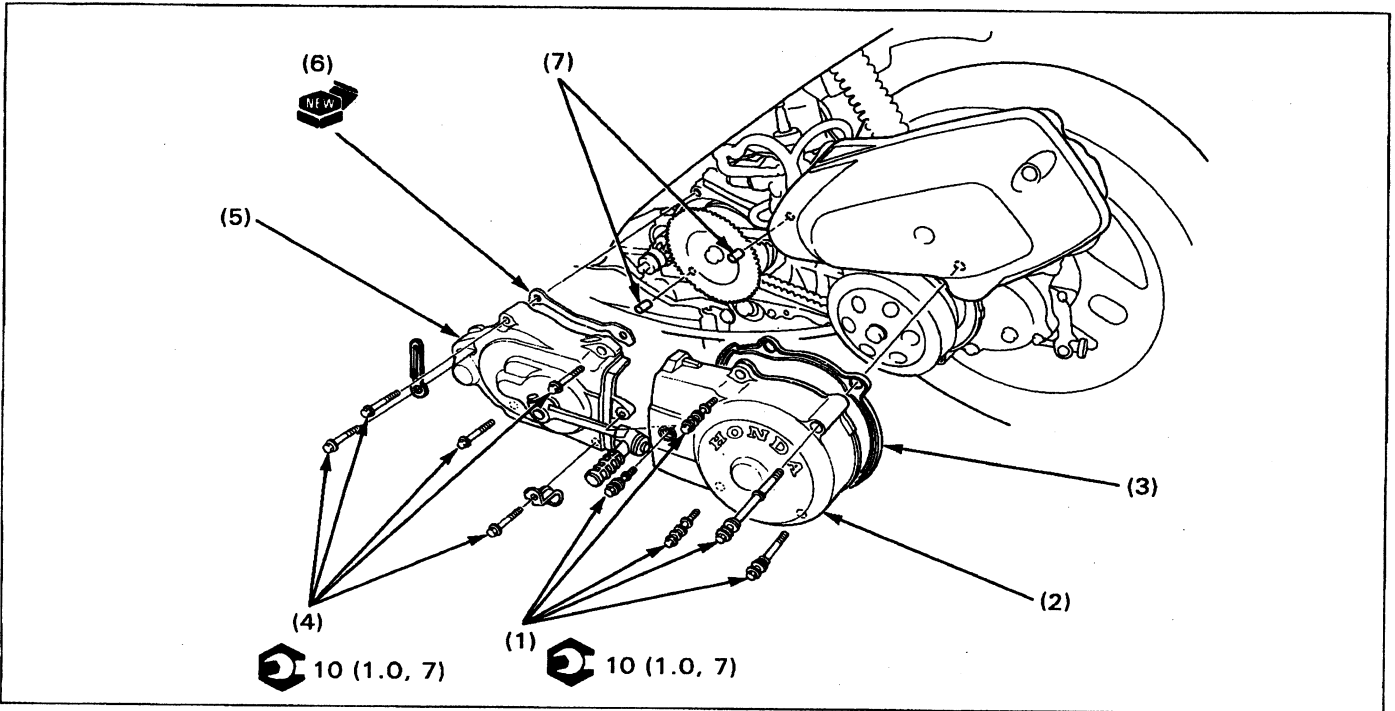

| Procedure | | Q'ty | Remarks |
|-----------|----------------------------|------|--|
| | Removal Order | | Installation is in the reverse order of removal. |
| (1) | 6 mm special bolt | 5 | |
| (2) | Left crankcase rear cover | 1 | Push down the kickstarter pedal and remove the cover. |
| (3) | Rubber gasket | 1 | NOTE • Replace with a new one if damaged. |
| (4) | 6 mm bolt | 5 | NOTE • When installing, do not forget to install the cable clamps in position. |
| (5) | Left crankcase front cover | 1 | |
| (6) | Gasket | 1 | |
| (7) | Dowel pin | 2 | |