


Front Wheel Disassembly/Assembly

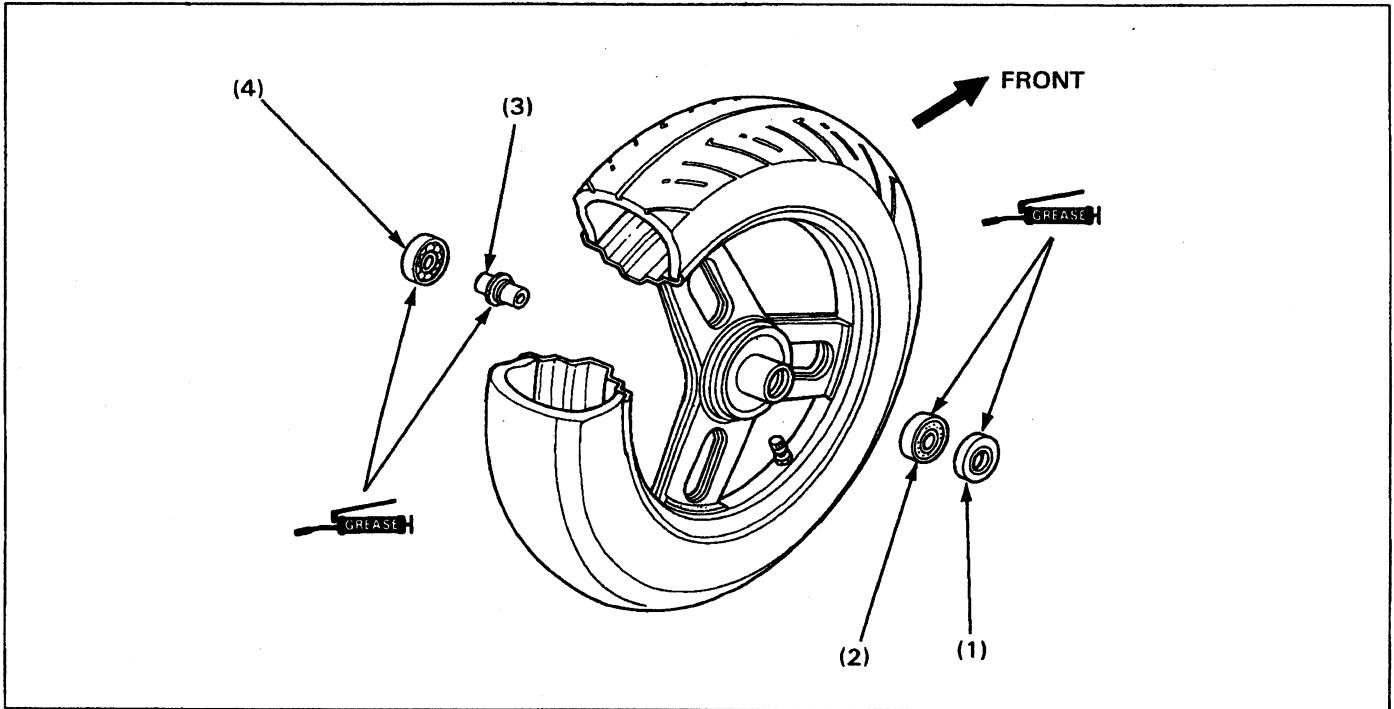

Requisite Service

- Front wheel removal/installation (page 11-2)

Procedure	Q'ty	Remarks
Disassembly Order		Assembly is in the reverse order of disassembly.
(1) Dust seal	1	
(2) Right wheel bearing (6200U)	1	
(3) Distance collar	1	
(4) Left wheel bearing (6200U)	1	