

## Front Wheel/Suspension/Steering/Brake

### Top Cone Race/Stem Lock Nut Installation

Install the top cone race and hand-tighten it.  
Rotate the steering stem lock-to-lock several times to seat the bearings.  
Make sure that the steering stem rotates smoothly without vertical play.

Hold the top cone race and tighten the steering stem lock nut.

**Torque: 70 N·m (7.0 kg-m, 51 ft-lb)**

**S.TOOL**

Lock nut wrench A  
Lock nut wrench B

07916-KM10000  
07916-1870100

