
16. Lights/Meters/Switches

Service Information	16-1	Ignition Switch Replacement	16-2
Fuel Level Sensor Inspection	16-2	Bulb Replacement	16-2
Oil Level Switch Inspection	16-2	Rear Combination Dummy Removal/ Installation	16-4

Service Information

- A continuity test can be made with the switches installed on the scooter. Refer to the continuity chart of the wiring diagram (section 17) for switch continuity.
- Check the battery condition before performing any inspection that requires proper battery voltage.
- Refer to page 25-2 of the Common Service Manual for oil level indicator inspection.
- Refer to page 25-7 of the Common Service Manual for fuel gauge inspection.