

To print chapters, click on the printer icon and fill in the page range.

1.	General Information	5 - 20
2.	Frame/Body panels/Exhaust	21 - 29
3.	Maintenance	30 - 35
4.	Lubrication system	36 - 39
5.	Fuel system	40 - 48
6.	Engine removal/Installation	49 - 51
7.	Cylinder head/Cylinder/ Piston	52 - 54
8.	Kickstarter/Drive Pulley Clutch/Driven Pulley	55 - 63
9.	Final reduction	64 - 66
10.	Crankcase/Crankshaft	67 - 71
11.	Frontwheel/Suspension /Steering/Brake	72 - 80
12.	Rear wheel/Suspension /Steering/Brake	81 - 84
13.	Charging system/Alternator	85 - 93
14.	Ignition system	94 - 100
15.	Electric starter	101 - 105
16.	Lights/Meters/Switches	106 - 109
17.	Wiring diagrams	110
18.	Troubleshooting	111 - 113
	Index	1

Note: Make sure to select  Shrink to fit in the printer dialog box when printing wiring diagrams.