


## Suspension Linkage Disassembly/Assembly

'90-'93:

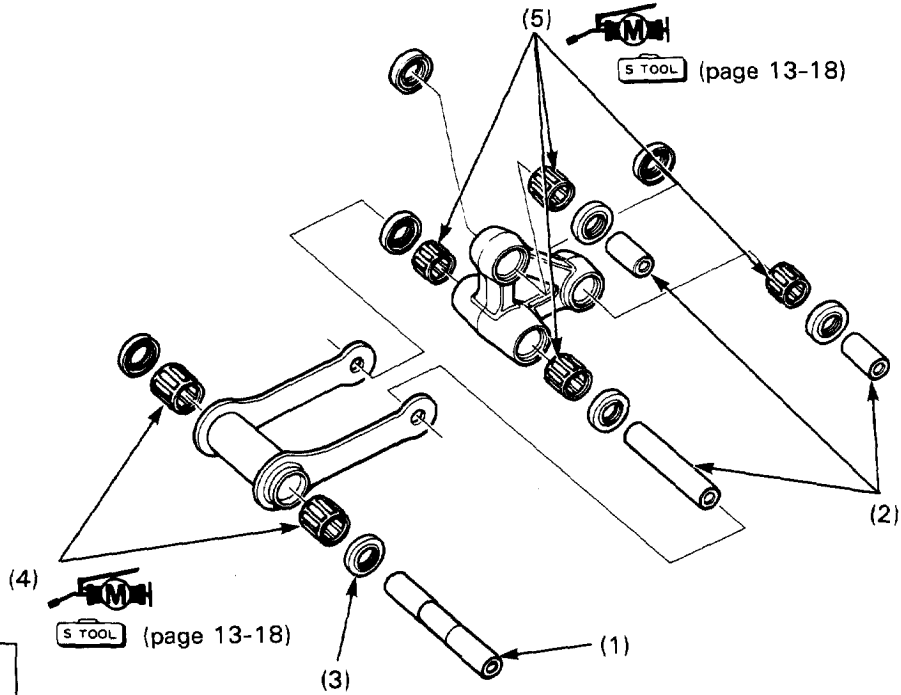

## NOTE

- Support the motorcycle by placing a support block under the exhaust system or with the optional centerstand.

## Requisite Service

- Suspension linkage removal/installation (page 13-14).

Procedure		Q'ty	Remarks
<b>Removal Order</b>			• Installation is in the reverse order of removal.
(1)	Cushion rod pivot collar	1	
(2)	Shock arm pivot collar	3	
(3)	Dust seal	8	When installing, apply molybdenum disulfide grease to the dust seal lips.
(4)	Cushion rod needle bearing	2	Refer to page 13-18 for replacement.
(5)	Shock arm needle bearing	4	Refer to page 13-18 for replacement.