


(From the previous page)

With the ignition switch OFF, check for continuity between the Pink wire (sensor signal line) terminals at the speed sensor connector and printed circuit board screw with the connector remained connected as shown.

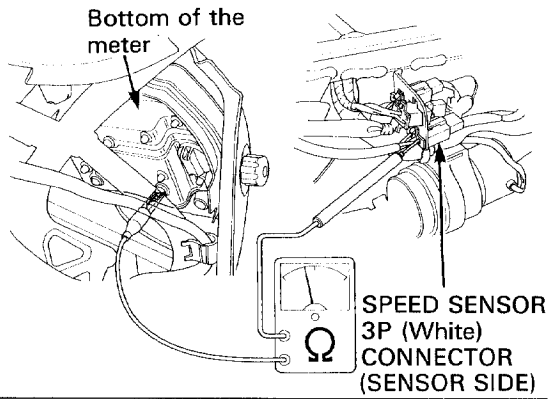

No continuity


- Loose or poor contact of sensor 3P connector or meter 10P (Green) connector.
- Open circuit in Pink wire.
- Faulty printed circuit board.

Continuity

Place the motorcycle on its center stand. Measure the output voltage (sensor signal) between the Pink terminal at the meter 10P Green connector and body ground with the connector remained connected and the ignition switch ON while turning the rear wheel slowly by hand.

Abnormal  
(No input sensor signal)

- Faulty speed sensor.

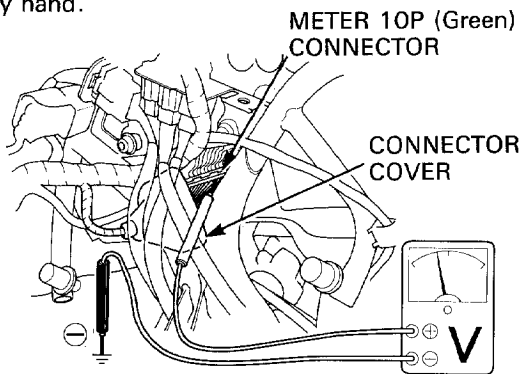

Normal (Sensor signal is input the speedometer)

Faulty speedometer