## 20

## 20. Troubleshooting

**Possible Cause** 

| Engine Does Not Start or is Hard to Start | 20-1 | Poor Performance at High Speed | 20-4 |
|---|------|--------------------------------|------|
| Engine Lacks Power                        | 20-2 | Poor Handling                  | 20-4 |
| Poor Performance at Low and Idle Speeds   | 20-3 |                                |      |

## **Engine Does Not Start or is Hard to Start**

6. Start with choke on

