



Remove the following parts:

- clutch assembly (page 7-11).
- oil pump driven sprocket by removing the bolt and washer.
- gear shift linkage (page 9-2).

Pull the oil strainer downward out of the oil pump. Remove the oil pump by removing the mounting bolts and remove the oil strainer.

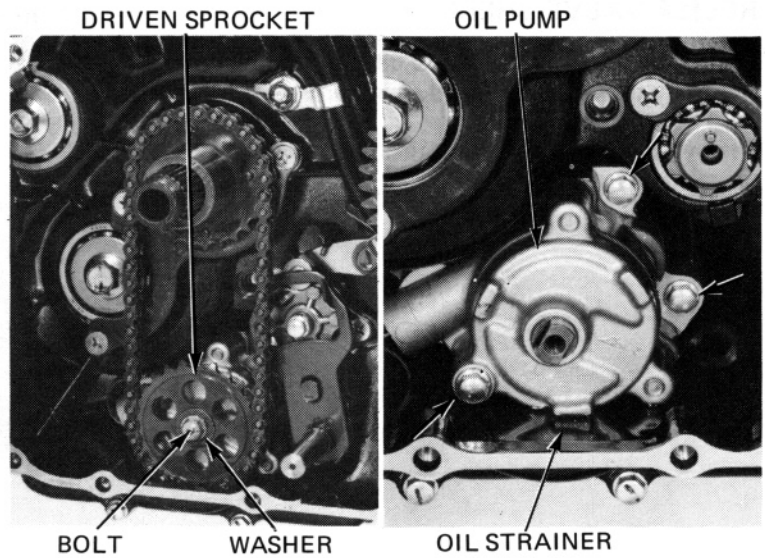

Remove the O-ring and dowel pin.

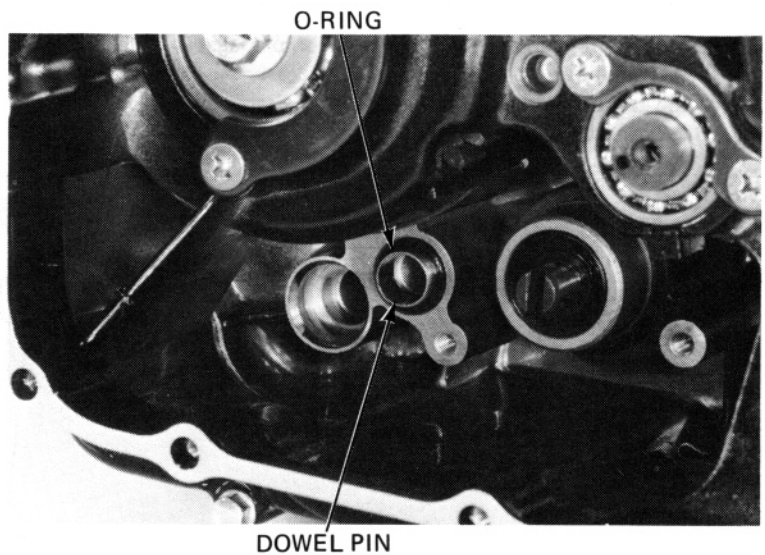

### OIL STRAINER CLEANING

Clean the oil strainer with non-flammable solvent.

